A01

•UNIVERSAL PROGRAMMING KEY FOR AT INSTRUMENTS



FEATURES

TEATORES		
FUNCTIONAL	A01	
Functions	The key is able to "dialogue" with: * An instrument and to copy parameters from it to the key and vice versa * A second key and to integrally copy its parameters * A Personal computer * A Personal computer and an instrument Aor is able to recovery data from failed instruments too and permits unlimited copies of configuration, error free.	
Serial communication	Interface RS485, not insulated Interface TTL, not insulated	
GENERAL		
Connections	TTL male connector: JST S 5B-PH-KL TTL female connector : SAMTEC SQT-105-02-L-S RS485 connector: Phoenix MC 1,5/3-G-3.5 PWS connector : Dc power Jack 1.3mm USB connector type: Mini-USB Dip switch: 4 ways	
Operating / storage temperature	0 50°C (32 122°F) / -20+70°C (-4 158°F)	
Operating humidity	20 95 RH% without condensation	

HOW TO ORDER

To compose the part number, pls. choose one of the option for each variable		
A01	CODE	
CONNECTOR		
5 pole for 78x35, DIN rail, 72x72 series	5	
3 pole for 48x48 series	3	
POWER ADAPTOR		
Available	E	
Not available	-	
KIT FOR PC CONFIGURATION		
USB cable and SW on Cdrom support	S	
Without cable and SW	_	

DIMENSIONS

