

# MICROPROCESSOR-BASED DIGITAL **ELECTRONIC CONTROLLER**



# **OPERATING INSTRUCTIONS**

14/01 - Code: ISTR M TLK72 E 02 --

### ASCON TECNOLOGIC S.r.I.

Viale Indipendenza 56 27029 Vigevano (PV) ITALY TEL.: +39 0381 69871 - FAX: +39 0381 698730 http://www.ascontecnologic.com e-mail: info@ascontecnologic.com

### FOREWORD



This manual contains the information necessary for the product to be installed correctly and also instructions for its maintenance and use; we therefore recommend that the utmost attention is paid to the following instructions and to save it.

This document is the exclusive property of ASCON TECNOLOGIC S.r.l. which forbids any reproduction and divulgation, even in part, of the document, unless expressly authorized.

ASCON TECNOLOGIC S.r.l. reserves the right to make any formal or functional changes at any moment and without any notice.

Whenever a failure or a malfunction of the device may cause dangerous situations for persons, thing or animals, please remember that the plant has to be equipped with additional devices which will guarantee safety.

ASCON TECNOLOGIC S.r.l. and its legal representatives do not assume any responsibility for any damage to people, things or animals deriving from violation, wrong or improper use or in any case not in compliance with the instrument's features.

### INDEX

- 1 **INSTRUMENT DESCRIPTION**
- GENERAL DESCRIPTION 1.1
- FRONT PANEL DESCRIPTION 1.2
- 2 PROGRAMMING
- FAST PROGRAMMING OF SET POINT 2.1
- 2.2 SELECTION OF CONTROL STATE AND PARAMETER PROGRAMMING
- 2.3 PARAMETER PROGRAMMING LEVELS
- 2.4 CONTROL STATES
- 2.5 ACTIVE SET POINT SELECTION
- 3 INFORMATION ON INSTALLATION AND USE
- 3.1 PERMITTED USE
- 3.2 MECHANICAL MOUNTING
- 3.3 ELECTRICAL CONNECTIONS
- 3.4 ELECTRICAL WIRING DIAGRAM
- 4 **FUNCTIONS**
- 4.1 MEASURING AND VISUALIZATION
- 4.2 OUTPUTS CONFIGURATION
- 4.3 **ON/OFF CONTROL**
- NEUTRAL ZONE ON/OFF CONTROL 4.4
- 4.5 SINGLE ACTION PID CONTROL
- 4.6 DOUBLE ACTION PID CONTROL
- 4.7 AUTO-TUNING AND SELF-TUNING FUNCTIONS
- 4.8 REACHING OF SET POINT AT CONTROLLED SPEED AND AUTOMATIC COMMUTATION BETWEEN TWO SET POINTS
- SOFT-START FUNCTION 49
- 4.10 ALARMS OUTPUTS FUNCTIONS
- LOOP BREAK ALARM FUNCTION 4.11
- FUNCTION OF KEY "U" 4.12
- 4.13 DIGITAL INPUT
- 4.14 **RS 485 SERIAL INTERFACE**
- 4.15 PARAMETERS CONFIGURATION BY A01
- PROGRAMMABLE PARAMETERS TABLE 5
- 6 **PROBLEMS , MAINTENANCE AND GUARANTEE**
- 6.1 ERROR SIGNALLING
- CLEANING 6.2
- 6.3 WARRANTY AND REPAIRS
- 7 **TECHNICAL DATA**
- 7.1 ELECTRICAL DATA MECHANICAL DATA
- 7.2 MECHANICAL DIMENSIONS 7.3
- FUNCTIONAL DATA 7.4
- 7.5
- MEASUREMENT RANGE TABLE 7.6 INSTRUMENT ORDERING CODE

### 1 - INSTRUMENT DESCRIPTION

### **1.1 - GENERAL DESCRIPTION**

TLK 72 is a "single loop" digital microprocessor-based controller, with ON/OFF, Neutral Zone ON/OFF, PID single action, PID dual action (direct and reverse) control and with AUTO-TUNING FAST function, SELF-TUNING function and automatic calculation of the FUZZY OVERSHOOT CONTROL parameter for PID control

The PID control has a particular algorithm with TWO DEGREES OF FREEDOM that optimises the instrument's features independently in the event of process disturbance and Set Point variations.

Furthermore, the instrument allows for one digital input and RS485 serial communication using MODBUS-RTU communication protocol and a transmission speed up to 38.400 baud.

The process value is visualized on 4 red displays, while the output status is indicated by 3 LED displays.

The instrument is equipped with a 3 LED programmable shift indexes .

The instrument provides for the storage of 4 Set Points and can have up to 3 outputs: relay type or can drive solid state relays type (SSR).

Depending on the model required the input accept:

C: Thermocouples temperature probes (J,K,S and ZIS Infrared sensors), mV signals (0..50/60 mV, 12..60 mV), Thermoresistances PT100.

ASCON TECNOLOGIC - TLK 72 - OPERATING INSTRUCTIONS - PAG. 1


E : Thermocouples temperature probes (J,K,S and ZIS Infrared To exit the fast Set programming it is necessary to push key P, after sensors), mV signals (0..50/60 mV, 12..60 mV), Thermistors PTC and NTC

I : normalized analogue signals 0/4..20 mA

V : normalized analogue signals 0..1 V, 0/1..5 V, 0/2..10 V

Other important available functions are: Loop-Break Alarm function, reaching of the Set Point at controlled speed, ramp and dwell function, Soft-Start function, protection compressor function for neutral zone control, parameters protection on different levels.

### **1.2 - FRONT PANEL DESCRIPTION**

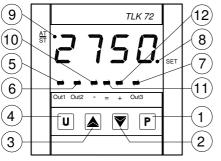

 ${\bf 1}$  - Key  ${\bf P}$  : This is used to access the programming parameters and to confirm selection.

2 - Key DOWN : This is used to decrease the values to be set and to select the parameters. If the key is held down, the user returns to the previous programming level until he exits the programming mode.

3 - Key UP : This is used to increase the values to be set and to select the parameters. If the key is held down, the user returns to the previous programming level until he exits the programming mode. Outside the programming mode it permits visualisation of the output control power.

4 - Key U : This is a key with a function programmable by par. "USrb". It can be set to : Activate Auto-tuning and Self-tuning functions, swap the instrument to manual control, silence the alarm, change the active Set Point, deactivate control (see par. 4.12) and modify the visibility of the parameters in "ConF" menu (see par. 2.3).

5 - Led OUT1 : indicates the state of output OUT1

6 - Led OUT2 : indicates the state of output OUT2

7 - Led OUT3 : indicates the state of output OUT3

8 - Led SET : It indicates access to the programming mode and parameter programming level.

9 - Led AT/ST : indicates that the Self-tuning function is activated (light on) or that Auto-tuning (flashing) is in progress.

10 - Led - Shift index: indicates that the process value is lower than the one programmed on par. "AdE".

11 - Led = Shift index: indicates that the process value is within the range [SP+AdE ... SP-AdE]

12 - Led + Shift index: indicates that the process value is higher than the one set on par. "AdE".

### 2 - PROGRAMMING

### 2.1 - FAST PROGRAMMING OF THE SET POINT

This procedure permits rapid programming of the active Set Point and possibly the alarm thresholds (see par 2.3)

Push key "P", then release it and the display will visualise "SP  $\boldsymbol{n}$ " (where n is the number of the Set Point active at that moment) alternatively to the programmed value.

To modify the value, press "UP" key to increase it or the "DOWN" key to decrease it.

These keys change the value one digit at a time but if they are pressed for more than one second, the value increases or decreases rapidly and, after two seconds in the same condition, the changing speed increases in order to allow the desired value to be reached rapidly.

Once the desired value has been reached, by pushing key P it is possible to exit by the fast programming mode or it is possible to visualise the alarm thresholds (see par. 2.3).

the visualisation of the last Set Point, or alternatively, if no key is pressed for approx. 15 seconds, the display will return to normal functioning automatically.

### 2.2 - SELECTION OF THE CONTROL STATE AND PARAMETER PROGRAMMING

By pushing key "P" and holding it down for approx. 2 sec. it is possible to enter into the main selection menu.


Using the "UP" or DOWN" keys, it is then possible to roll over the selections:

"OPEr"	to enter into the operating parameters menu			
"ConF"	to enter into the configuration parameters menu			
"OFF"	to swap the regulator into the OFF state			
"rEG"	to swap the regulator into the automatic control state			
"tunE"	to activate the Auto-tuning or Self-tuning function			
"OPLO"	to swap the regulator to the manual control state and therefore to program the % control value using the "UP" and "DOWN" keys			

Once the desired item has been selected, push key "P" to confirm. Selecting "OPEr" and "ConF" gives the possibility of accessing other menus containing additional parameters and more precisely :

"OPEr" - Operating parameters Menu: this normally contains the Set Point parameters but it can contain all the desired parameters (see par. 2.3).

"ConF" - Configuration parameters Menu: this contains all the operating parameters and the functioning configuration parameters (alarm configuration, control, input, etc.)

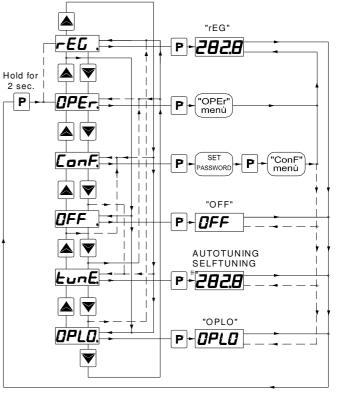

To enter the menu "ConF" select the option "ConF", press the key "P" and the display will show "0".

At this request, enter, using keys "UP" and "DOWN", the number reported on the last page of this manual and push key "P".

If an incorrect password is entered, the instrument exit from programming mode.

If the password is correct, the display will visualise the code identifying the first group of parameters (" <sup>1</sup>SP ") and with keys "UP" and "DOWN" it will be possible to select the desired group of parameters.

Once the desired group of parameters has been selected, the code identifying the first parameter of the selected group will be visualised by pushing the "P" key.

Again using the "UP" and "DOWN" keys, it is possible to select the - By using the key "U" on the keyboard; suitably programming par. desired parameter and, if the key "P" is pressed, the display will alternatively show the parameter's code and its programming value, which can be modified by using the "UP" or "DOWN" keys.

Once the desired value has been programmed, push key "P" once more: the new value will be memorised and the display will show only the code of the selected parameter.


By using the "UP" or "DOWN" keys, it is then possible to select a new parameter (if present) and modify it as described above.

To select another group of parameters, keep the "UP" or "DOWN" key pressed for approx. 2 sec., afterwards the display will return to visualise the code of the group of parameters.

Release the key and by using the "UP" and "DOWN" keys, it will be possible to select a new group.

To exit the programming mode, no key should be pressed for approx. 20 seconds, or keep the "UP" or "DOWN" pressed until exit from the programming mode is obtained.

The programming and exit modes for the "OPEr" menu are the same as those described for menu "ConF" with the difference that to access the menù "OPEr" the Password is not required.

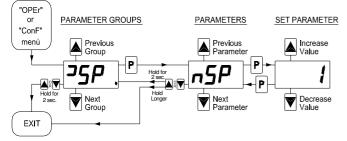

**ATTENTION:** The instrument is programmed in factory with all the parameters, to exception of the Set Point "SP1" (and 2,3,4), programmable in the menù "ConF" to the purpose to prevent wrong accidental programming from non experienced consumers.

### 2.3 - PARAMETERS PROGRAMMING LEVELS

The menu "OPEr" normally contains the parameters used to program the Set Point; however it is possible to make all desired parameters appear or disappear on this level, by following this procedure:

Enter the menu "ConF" and select the parameter to be made programmable or not programmable in the menu "OPEr".

Once the parameter has been selected, if the LED SET is switched off, this means that the parameter is programmable only in the menu "ConF", if instead the LED is on, this means that the parameter is also programmable in the menu "OPEr".

To modify the visibility of the parameter, push key "U" : the LED SET will change its state indicating the parameter accessibility level (on = menu "OPEr" and "ConF"; off = menu "ConF" only).

The active Set Point and the alarm thresholds will only be visible on the Set Point fast programming level (described in par. 2.1) if the relative parameters are programmed to be visible (i.e. if they are present in the menu "OPEr").

The possible modification of these Sets, with the procedure described in par. 2.1, is instead subordinate to what is programmed in par. "Edit" (contained in the group "<sup>1</sup>PAn ").

This parameter can be programmed as :

=SE : The active Set Point can be modified while the alarm thresholds cannot be modified.

=AE : The active Set Point cannot be modified while the alarm thresholds can be modified

=SAE : Both the active Set Point and the alarm thresholds can be modified

=SAnE : Both the active Set Point and the alarm thresholds cannot be modified

### 2.4 - CONTROL STATES

The controller can act in 3 different ways : automatic control (rEG), control off (OFF) and manual control (OPLO).

The instrument is able to pass from one state to the other :

- by selecting the desired state from the main selection menu suing the keyboard.

"USrb" ("USrb" = tunE; "USrb" = OPLO; "USrb" = OFF) it is possible to pass from "rEG" state to the state programmed on the parameter and vice versa.

- By using the digital input 1 suitably programming par. "diF" ("diF" = = OFF) it is possible to pass from "rEG" state to the state OFF and vice versa.

- Automatically (the instrument swaps into "rEG" state at the and of the auto-tuning execution)

When switched on, the instrument automatically reassumes the state it was in when it was last switched off.

AUTOMATIC CONTROL (rEG) - Automatic control is the normal functioning state of the controller.

During automatic control it is possible to visualize the control power on the display by pushing key "UP".

The range of the power values goes from H100 (100% of the output power with reverse action) to C100 (100% of the output power with direct action).

CONTROL OFF (OFF) - The instrument can be swapped into the "OFF" state, i.e. the control and the relative outputs are deactivated. The alarm outputs are instead working normally.

BUMPLESS MANUAL CONTROL (OPLO) - By means of this option it is possible to manually program the power percentage given as output by the controller by deactivating automatic control.

When the instrument is swapped to manual control, the power percentage is the same as the last one supplied and can be modified using the "UP" and "DOWN" keys.

As in the case of automatic control, the programmable values range from H100 (+100%) to C100 (-100%).

To return to automatic control, select "rEG" in the selection menu.

### 2.5 - ACTIVE SET POINT SELECTION

This instrument permits pre-programming of up to 4 different Set points ("SP1", "SP2", "SP3", "SP4") and then selection of which one must be active. The maximum number of Set points is determined by the par. "nSP" located in the group of parameters <sup>1</sup>SP ".

The active Set point can be selected :

- by parameter "SPAt" in the group of parameters " <sup>1</sup>SP ".

- by key "U" if par. "USrb" = CHSP

- by the digital input if diF" = CHSP , = SP1.2 or = HE.Co

- Automatically between SP1 and SP2 if a time "dur.t" (see par. 4.8) has been programmed.

Set Points "SP1", "SP2", "SP3", "SP4" will be visible depending on the maximum number of Set Points selected on par. "nSP" and they can be programmed with a value that is between the value programmed on par. "SPLL" and the one programmed on par. "SPHL".

Note : in all the following examples the Set point is indicated as "SP", however the instrument will act according to the Set point selected as active.

### **3 - INFORMATION ON INSTALLATION AND USE**

### 3.1 - PERMITTED USE



The instrument has been projected and manufactured as a measuring and control device to be used according to EN61010-1 for the altitudes operation until 2000 ms.

The use of the instrument for applications not expressly permitted by the above mentioned rule must adopt all the necessary protective measures.

The instrument CANNOT be used in dangerous environments (flammable or explosive) without adequate protection.

The installer must ensure that EMC rules are respected, also after the instrument installation, if necessary using proper filters.

Whenever a failure or a malfunction of the device may cause

dangerous situations for persons, thing or animals, please remember that the plant has to be equipped with additional devices which will guarantee safety.

### **3.2 – MECHANICAL MOUNTING**

The instrument, in DIN case 72 x 72 mm, is designed for flushin panel mounting. Make a hole  $66,5 \times 66,5$  mm and insert the instrument, fixing it

with the provided special brackets.

We recommend that the gasket is mounted in order to obtain the front protection degree as declared. Avoid placing the instrument in environments with very high humidity levels or dirt that may create condensation or introduction of conductive substances into the instrument.

Ensure adequate ventilation to the instrument and avoid installation in containers that house devices which may overheat or which may cause the instrument to function at a higher temperature than the one permitted and declared.


Connect the instrument as far away as possible from sources of electromagnetic disturbances such as motors, power relays, relays, solenoid valves, etc.

### **3.3 - ELECTRICAL CONNECTION**

Carry out the electrical wiring by connecting only one wire to each terminal, according to the following diagram, checking that the power supply is the same as that indicated on the instrument and that the load current absorption is no higher than the maximum electricity current permitted. As the instrument is built-in equipment with permanent connection inside housing, it is not equipped with either switches or internal devices to protect against overload of current: the installation will include an overload protection and a two-phase circuit-breaker, placed as near as possible to the instrument, and located in a position that can easily be reached by the user and marked as instrument disconnecting device which interrupts the power supply to the equipment. It is also recommended that the supply of all the electrical circuits connected to the instrument must be protect properly, using devices (ex. fuses) proportionate to the circulating currents. It is strongly recommended that cables with proper insulation, according to the working voltages and temperatures, be

used. Furthermore, the input cable of the probe has to be kept separate from line voltage wiring. If the input cable of the probe is screened, it has to be connected to the ground with only one side. We recommend that a check should be made that the parameters are those desired and that the application functions correctly before connecting the outputs to the actuators so as to avoid malfunctioning that may cause irregularities in the plant that could cause damage to people, things or animals.

### 3.4 - ELECTRICAL WIRING DIAGRAM

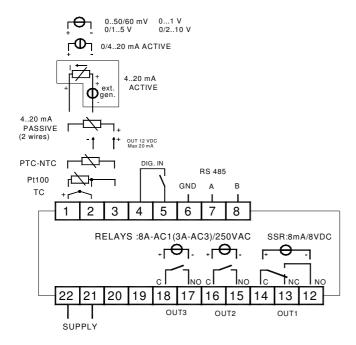

### 4 - FUNCTIONS

### 4.1 - MEASURING AND VISUALIZATION

All the parameters referring measurements are contained in the group "InP".

Depending on the model required the input accept:

**C**: Thermocouples temperature probes (J,K,S and ZIS Infrared sensors), mV signals (0..50/60 mV, 12..60 mV), Thermoresistances PT100.

 ${\rm \textbf{E}}$  : Thermocouples temperature probes (J,K,S and ZIS Infrared sensors), mV signals (0..50/60 mV, 12..60 mV), Thermistors PTC and NTC.

I : normalized analogue signals 0/4..20 mA

V : normalized analogue signals 0..1 V, 0/1..5 V, 0/2..10 V

Depending on the model, using par. "**SEnS**", it's possible to select the type of input probe, which can be :

- for thermocouples J (J), K (CrAL), S (S) or for infrared sensors serie ZIS with linearization J (Ir.J) or K (Ir.CA)

- for thermoresistances Pt100 IEC (Pt1) or thermistors PTC KTY81-121 (Ptc) or NTC 103AT-2 (ntc)

- for normalised signals in current 0..20 mA (0.20) or 4..20 mA (4.20)

- for normalised signals in tension 0..1 V (0.1), 0..5 V (0.5), 1..5 V (1.5), 0..10 V (0.10) or 2..10 V (2.10).

- for normalised signals in tension 0..50 mV (0.50), 0..60 mV (0.60), 12..60 mV (12.60).

We recommend to switch on and off the instrument when these parameters are modified, in order to obtain a correct measuring.

For the instruments with input for temperature probes (tc, rtd) it's possible to select, through par. **"Unit"**, the unit of measurement ( $^{\circ}$ C,  $^{\circ}$ F) and, through par. **"dP"** (Pt100, PTC and NTC only) the desired resolution (0=1°; 1=0,1°).

Instead, with regards to the instruments with normalised analogue input signals, it is first necessary to program the desired resolution on par. "**dP**" (0=1; 1=0,1; 2=0,01; 3=0,001) and then, on par. "**SSC**", the value that the instrument must visualise at the beginning of the scale (0/4 mA, 0/12 mV, 0/1 V o 0/2 V) and, on par. "**FSC**", the value that the instrument must visualise at the end of the scale (20 mA, 50 mV, 60 mV, 5 V or 10 V).

The instrument allows for measuring calibration, which may be used to recalibrate the instrument according to application needs, by using par. **"OFSt"** and **"rot"**.

Programming par. "rot"=1,000, in par. "OFSt" it is possible to set a positive or negative offset that is simply added to the value read by the probe before visualisation, which remains constant for all the measurements.

If instead, it is desired that the offset set should not be constant for all the measurements, it is possible to operate the calibration on any two points.

In this case, in order to decide which values to program on par. "OFSt" and "rot", the following formulae must be applied :

### "rot" = (D2-D1) / (M2-M1) "OFSt" = D2 - ("rot" x M2) where:

M1 =measured value 1

D1 = visualisation value when the instrument measures M1

M2 =measured value 2

D2 = visualisation value when the instrument measures M2 It then follows that the instrument will visualise :

### DV = MV x "rot" + "OFSt"

where: DV = visualised value MV= measured value

<u>Example 1:</u> It is desired that the instrument visualises the value effectively measured at  $20^{\circ}$  but that, at  $200^{\circ}$ , it visualises a value lower than  $10^{\circ}(190^{\circ})$ .

Therefore : M1=20 ; D1=20 ; M2=200 ; D2=190

"rot" = (190 - 20) / (200 - 20) = 0,944

"OFSt" = 190 - (0,944 x 200) = 1,2

<u>Example 2</u>: It is desired that the instrument visualises  $10^{\circ}$  whilst the value actually measured is  $0^{\circ}$ , but, at  $500^{\circ}$  it visualises a  $50^{\circ}$  higher value (550°).

Therefore : M1=0 ; D1=10 ; M2=500 ; D2=550

"rot" = (550 - 10) / (500 - 0) = 1,08

"OFSt" = 550 - (1,08 x 500) = 10

By using par. "FiL" it is possible to program time constant of the software filter for the input value measured, in order to reduce noise sensitivity (increasing the time of reading).

In case of measurement error, the instrument supplies the power as programmed on par. "  $\ensuremath{\text{OPE}}$  ".

This power will be calculated according to cycle time programmed for the PID controller, while for the ON/OFF controllers the cycle time is automatically considered to be equal to 20 sec. (e.g. In the event of probe error with ON/OFF control and "OPE"=50, the control output will be activated for 10 sec., then it will be deactivated for 10 sec. and so on until the measurement error remains.).

By using par. "**InE**" it is also possible to decide the conditions of the input error, allowing the instrument to give the power programmed on par. "OPE" as output.

The possibilities of par. "InE" are :

Or : the condition occurs in case of over-range or probe breakage
 Ur : the condition occurs in case of under-range or probe breakage

= Our : the condition occurs in case of over-range or under-range or probe breakage

Using par. "**dISP**", located in the group "<sup>1</sup>**PAn**", it is possible to set normal visualization of the display which can be the process variable (dEF), the control power (Pou), the active Set Point (SP.F) the Set Point operating when there are active ramps (SP.o) or alarm threshold AL1, AL2 or AL3 (AL1, AL2, AL3).

Again in the group "**PAn**" the par. "AdE" is present that defines the 3 led shift index functioning.

The lighting up of the green ed = indicates that the process value is within the range [SP+AdE ... SP-AdE], the lighting up of the led – indicates that the process value is lower than [SP-AdE] and the lighting up of the led + indicates that the process value is higher than [SP+AdE].

### **4.2 - OUTPUTS CONFIGURATION**

The instrument's outputs can be programmed by entering the group of parameters "**JOut**, where the relative parameters "**O1F**", "**O2F**" and "**O3F**" (depending on the number of outputs available on the instrument) are located.

The outputs can be set for the following functions :

- Main control output (1.rEG)

- Secondary control output (2.rEG)

- Alarm output normally open (ALno)

- Alarm output normally closed (ALnc)

- Alarm output normally closed with led reverse indication (ALni)

- Output deactivated (OFF)

The coupling outputs number outputs – number alarms can be made in the group referring to the alarm to the alarm (" $^{1}AL1$ ", " $^{1}AL2$ ", " $^{1}AL3$ ").

### 4.3 - ON/OFF CONTROL (1.rEG)


All the parameters referring to the ON/OFF control are contained in the group "IrEG".

This type of control can be obtained by programming par."Cont" = On.FS or = On.FA and works on the output programmed as 1.rEG, depending on the measure, on the active Set Point "SP", on the functioning mode "Func" and on the hysteresis "HSEt".

The instrument carries out an ON/OFF control with symmetric hysteresis if "Cont" = On.FS or with asymmetrical hysteresis if "Cont" = On.Fa.

The control works in the following way : in the case of reverse action, or heating ("FunC"=HEAt), it deactivates the output, when the process value reaches [SP + HSEt] in case of symmetrical hysteresis, or [SP] in case of asymmetrical hysteresis and is then activated again when the process value goes below value [SP - HSEt].

Vice versa, in case of direct action or cooling ("Func"=CooL), it deactivates the output, when the process value reaches [SP - HSEt] in case of symmetrical hysteresis, or [SP] in case of asymmetrical hysteresis and is activated again when the process value goes above value [SP + HSEt].

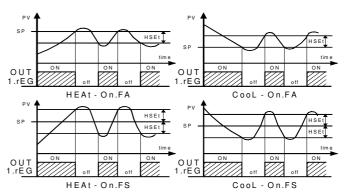

### 4.4 - NEUTRAL ZONE ON/OFF CONTROL (1.rEG - 2.rEG)

All the parameters referring to Neutral Zone ON/OFF control are contained in the group "  $^{\rm l}{}^{\rm r} {\rm EG}$  ".


This type of control can be obtained when 2 outputs are programmed respectively as 1.rEG and 2.rEG and the par. "Cont" = nr.

The Neutral Zone control is used to control plants in which there is an element which causes a positive increase (ex. Heater, humidifier, etc.) and an element which causes a negative increase (ex. Cooler, de-humidifier, etc).

The control functions works on the programmed outputs depending on the measurement, on the active Set Point "**SP**" and on the hysteresis **"HSEt**".

The control works in the following way : it deactivates the outputs when the process value reaches the Set Point and it activates the output 1.rEG when the process value goes below value [SP - HSEt], or it activates the output 2.rEG when the process value goes above [SP + HSEt].

Consequently, the element causing a positive increase has to be connected to the output programmed as 1.rEG while the element causing a negative increase has to be connected to the output programmed as 2.rEG.

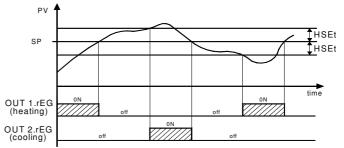

If 2.rEG output is used to control compressor is possible to use the "Compressor Protection" function that has the meaning to avoid compressor "short cycles".

This function allows a control by time on the output 2.rEG activation, independently by the temperature control request.

The protection is a "delayed after deactivation" type.

This protection permits to avoid the output activation for a time programmable on par. "**CPdt**" (expressed in sec.); the output activation will occurs only after the elapsing of time "CPdt".

The time programmed on parameter "CPdt" is counted starting from the last output deactivation.

Obviously, whether during the time delay caused by the compressor protection function, the regulator request should stop, the output activation foreseen after time "CPdt" would be erased.

The function is not active programming "CPdt" =OFF.


The led relative to 2.rEG output blinks during the phases of output activation delay, caused by "Compressor Protection" function.

### 4.5 - SINGLE ACTION PID CONTROL (1.rEG)

All the parameters referring to PID control are contained in the group " $^{l}\mathbf{rEG}$ ".

The Single Action PID control can be obtained by programming par."**Cont**" = Pid and works on the output 1.rEG depending on the active Set Point "**SP**", on the functioning mode "**Func**" and on the instrument's PID algorithm with two degree of freedom.

ASCON TECNOLOGIC - TLK 72 - OPERATING INSTRUCTIONS - PAG. 5

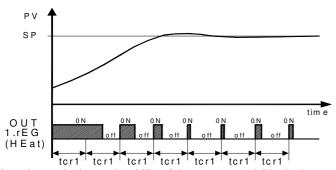

In order to obtain good stability of the process variable, in the event of fast processes, the cycle time "tcr1" has to have a low value with a very frequent intervention of the control output.

In this case use of a solid state relay (SSR) is recommended for driving the actuator.

The Single Action PID control algorithm foresees the setting of the following parameters :

"Pb" – Proportional Band

"tcr1" - Cycle time of the output 1.rEG

"Int" - Integral Time


"rS" - Manual Reset (if "Int =0 only)

"dEr" - Derivative Time

"FuOC" - Fuzzy Overshoot Control

This last parameter allows the variable overshoots at the start up of the process or at the changing of the Set Point to be avoided.

Please remember that a low value on this parameter reduces the overshoot while a high value increase it.

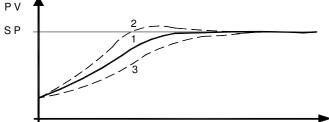

tim e

1: Value "FuOC" OK

2: Value "FuOC" too high

3: Value "FuOC" too low

### 4.6 - DOUBLE ACTION PID CONTROL (1.rEG - 2.rEG)

All the parameters referring to PID control are contained in the group "<sup>1</sup>rEG".

The Double Action PID control is used to control plants where there is an element which causes a positive increase (ex. Heating) and an element which causes a negative increase (ex. Cooling).

This type of control can be obtained when 2 outputs are programmed respectively as 1.rEG and 2.rEG and the par. "Cont" = Pid.

The element causing a positive increase has to be connected to the output programmed as 1.rEG while the element causing a negative increase has to be connected to the output programmed as 2.rEG.

The Double Action PID control works on the outputs 1.rEG and 2.rEG depending on the active Set Point "**SP**" and on the instrument's PID algorithm with two degrees of freedom.

In order to obtain good stability of the process variable, in case of fast processes, the cycle times "tcr1" and "tcr2" have to have a low value with a very frequent intervention of the control outputs.

In this case use of solid state relays (SSR) to drive the actuators is recommended.

The Double Action PID control algorithm needs the programming of the following parameters :

"Pb" - Proportional Band

"tcr1" - Cycle time of the output 1.rEG

"tcr 2" - Cycle time of the output 2.rEG

"Int" - Integral Time

"rS" - Manual Reset (if "Int =0 only)

"dEr" - Derivative Time

"FuOC" - Fuzzy Overshoot Control

"Prat" - Power Ratio or relation between power of the element controlled by output 2.rEG and power of the element controlled by output 1.rEG.

If par. "Prat" = 0, the output 2.rEG is disabled and the control behaves exactly as a single action PID controller, through output 1.rEG.

### 4.7 - AUTOTUNING AND SELFTUNING FUNCTIONS

All the parameters referring to the AUTO-TUNING and SELF-TUNING functions are contained in the group " ${}^{l}$ **rEG**".

The AUTO-TUNING and SELF-TUNING functions permit the automatic tuning of the PID controller.

The **AUTO-TUNING** function permits the calculation of the PID parameters by means of a FAST type tuning cycle and, at the end of this operation, the parameters are stored into the instrument's memory and remain constant during control.

The **SELF-TUNING** function (rule based "TUNE-IN") instead allows control monitoring and the continuous calculation of the parameters during control.

Both functions automatically calculate the following parameters :

"Pb" - Proportional Band

"tcr1" - Cycle time of the output 1rEG

"Int" - Integral Time

"dEr" - Derivative Time

"FuOC" - Fuzzy Overshoot Control

and, for the Double Action PID control, also :

"tcr 2" - Cycle time of the output 2rEG

"Prat" - Power Ratio P 2.rEG/ P 1.rEG

To activate the AUTO-TUNING function proceed as follows :

1) Program and activate the desired Set Point.

2) Program par. "Cont" = Pid.

3) Program par. "Func" according to the process to be controlled through output 1rEG.

4) Program an output as 2.rEG if the instrument controls a plant with double action

5) Program par. "Auto" as:

- "1" – if auto-tuning is desired automatically, each time the instrument is switched on, on the condition that the process value is lower (with "Func" =HEAt) than [SP- |SP/2|] or higher (with "Func" =CooL) than [SP+ |SP/2|].

- "2" - if auto-tuning is desired automatically, the next time the instrument is switched on, on the condition that the process value is lower (with "Func" =HEAt) than [SP- |SP/2|] or higher (with "Func" =CooL) than [SP+ |SP/2|], and once the tuning is finished, the par. "Auto" is automatically swapped to the OFF state

- "3" - if manual auto-tuning is desired, by selecting par. "tunE" in the main menu or by correctly programming key "U" as "USrb" = tunE. The Autotuning will start at the condition that the process value is lower (with "Func" =HEAt) than [SP- |SP/5|] or higher (with "Func" =CooL) than [SP+ |SP/5|].

- "4" - if it's desired to activate the autotuning automatically to every change of Set Point, or at the end of programmed Soft-Start cycle. The Autotuning will start at the condition that the process value is lower (with "Func" =HEAt) than [SP- |SP/5|] or higher (with "Func" =CooL) than [SP+ |SP/5|].

6) Exit from the parameter programming.

7) Connect the instrument to the controlled plant.

8) Activate the Auto-tuning by switch off and turn on the instrument if "Auto"=1 or 2, or by selecting par. "**tunE**" in the main menu (or by correctly programming key "U").

At this point the Auto-tuning function is activated and is indicated by the flashing led AT/ST.

The regulator carries out several operations on the connected plant in order to calculate the most suitable PID parameters.

If, at the Auto-tuning start, the condition for the lower or higher process value is not found the display will show "**ErAt**" and the instrument will be swapped to normal control conditions according to the previously programmed parameters.

To make the error "ErAt" disappear, press key P.

The Auto-tuning cycle duration has been limited to 12 hours maximum.

If Auto-tuning is not completed within 12 hours, the instrument will show "noAt" on the display.

In case of probe error, the instrument automatically stops the cycle in progress.

The values calculated by Auto-tuning are automatically stored in the instrument's memory at the end of the correct PID parameters tuning.

**Note** : The instrument is already programmed in our factory to carry out auto-tuning at every instrument switch on ("Auto" = 1).

To activate the SELF-TUNING function proceed as follows

1) Program and activate the desired Set Point.

2) Program par. "Cont" = Pid.

3) Program par. "Func" according to the process to be controlled through output 1.rEG.

4) Program an output as 2.rEG if the instrument controls a dualaction plant

5) Program par. "SELF" = vES

6) Exit from the parameter programming.

7) Connect the instrument to the controlled plant.

8) Activate Self-tuning selecting par. "tunE" in the main menu (or by correctly programming key "U").

When the Self-tuning function is active, the led AT/ST is permanently lit up and all the PID parameters ("Pb", "Int", "dEr", etc.) are no longer visualized.

Note : It's always preferable tuning the instrument using the Examples with starts from values lower than SP and with decreasing Autotuning and to activate the Selftuning after because the tuning through Selftuning is more slow.

To stop the Auto-tuning cycle or deactivate the Self-tuning function select one of the control types : "rEG", "OPLO" or "OFF" from the menu "SEL". If the instrument is switched off during Auto-tuning or with the Self-tuning function activated, these functions will remain activated the next time it is switched on.

### 4.8 - REACHING OF THE SET POINT AT CONTROLLED SPEED AND AUTOMATIC SWITCHING BETWEEN TWO SET POINTS (RAMPS AND DWELL TIME)

All the parameters referring to the ramps functioning are contained in the group "IrEG".

It is possible to reach the set point in a predetermined time (in any case longer than the time the plant would naturally need). This could be useful in those processes (heating or chemical treatments, etc.) where the set point has to be reached gradually, in a predetermined time.

Once the instrument has reached the first Set Point (SP1) it is possible to have automatic switching to the second Set Point (SP2) after a set time, thus obtaining a simple automatic process cycle.

These functions are available for all the programmable controls (PID single and double action, ON/OFF and Neutral Zone ON/OFF).

The function is determined by the following parameters :

"SLor" - Gradient of first ramp expressed in unit/minute

"SLoF" - Gradient of second ramp expressed in unit/minute.


"dur.t" - Dwell time of Set Point "SP1" before automatic switching to Set Point "SP2" (expressed in hrs. and min.).

The functions are deactivated when the relative parameters are = InF.

Note: In case of PID control, if Auto-tuning is desired whilst the ramp function is active, this will not be carried out until the tuning cycle has been completed. It is therefore recommended that Autotuning be started avoiding activating the ramp function and, once the tuning is finished, deactivate Auto-tuning ("Auto" = OFF), program the desired ramp and, if it automatic tuning is desired, enable the Self-tuning function.


If is desired only one ramp (ex. to reach "SP1") it is enough to program on the par. "SLor" the desired value.

The ramp "SLor" it will always active at power on and when the Active Set Point value is changed.

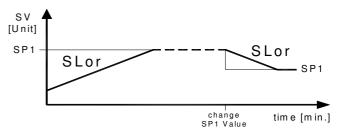

If it is desired an automatic cycle from the power on instead it is necessary to program the par. "nSP" = 2, to program the two Set Point values "SP1" and "SP2" and naturally to program the par. "SLor", "dur.t" and "SLoF" with the desired values.

In this case at the end of the cycle all the ramps won't be more active.

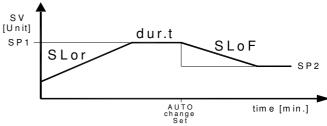

of SP.

### 4.9 - SOFT-START FUNCTION

All the parameters referring to the Soft -Start functioning are contained in the group "IrEG".

The Soft-Start function only works through PID control and allows the limitation of control power when the instrument is switched on, for a programmable period of time.

This is useful when the actuator, driven by the instrument, may be damaged excess power supplied when the application is not yet in the normal rating. (ex. for certain heating elements).

The function depends on the following parameters :

"St.P" - Soft-Start power

"SSt" - Soft-Start time (expressed in hh.mm)

"HSEt" - End Soft Start cycle threshold

If both parameters are programmed with values other than OFF, when switched on the instrument gives an output power as programmed on par. "St.P" for the time programmed on par. "SSt" or when is reached the absolute value programmed at par. "HSEt".

Practically, the instrument works in manual condition and switches to automatic control at the elapsing of time "SSt" or when is reached the absolute value programmed at par. "HSEt".

To disable the Soft-Start function simply program par. "SSt" = OFF. Whenever, a measurement errors occurs during the Soft-Start

execution, the function is interrupted and the instrument gives an output power as programmed on par. "OPE".

If the measurement is restored, the Soft-Start is still deactivated. If it's desired to activate the Autotuning with Soft-Start set par.

"Auto"=4. The Autotuning will start automatically at the end of programmed

Soft-Start cycle at the condition that the process value is lower (with "Func" =HEAt) than [SP- |SP/5|] or higher (with "Func" =CooL) than [SP+ |SP/5|].

### 4.10 - ALARMS OUTPUTS FUNCTIONS (AL1, AL2, AL3)

The alarms (AL1, AL2, AL3) are depending on the process value and before to set his functioning it's necessary to establish to which output the alarm has to correspond to.

First of all it's necessary to configure, in the parameters group "Out", the parameters relative to the outputs required as alarm ("O1F" , "O2F", "O3F") programming the parameter relative to the desired output as follows :

= ALno if the alarm output has to be ON when the alarm is active, while it's OFF when the alarm is not active

= ALnc if the alarm output has to be ON when the alarm is not active, while it's OFF when the alarm is active

= ALni if the alarm output has to be ON when the alarm is not "AL1H" and will be deactivated when it goes below the value [AL1H active, while it is OFF when the alarm is active but with reverse led indication (led ON= alarm OFF).

### Note: In all the examples that follow is made reference to the alarm AL1. Naturally the operation of the other alarms results analogous.

Have now access at the group "AL1", and program on par. "OAL1", to which output the alarm signal has to be sent.

The alarm functioning is instead defined by parameters :

"AL1t " - ALARM TYPE

"Ab1" - ALARM CONFIGURATION

"AL1" - ALARM THRESHOLD

"AL1L" - LOW ALARM THRESHOLD (for band alarm) OR MINIMUM SET OF AL1 ALARM THRESHOLD (for low or high alarm)

"AL1H" - HIGH ALARM THRESHOLD (for band alarm) OR MAXIMUM SET OF AL1 ALARM THRESHOLD (for low or high alarm)

"HAL1" - ALARM HYSTERESIS

"AL1d" - ALARM ACTIVATION DELAY (in sec.)

"AL1i" ALARM BEHAVIOUR -IN THE EVENT OF MEASUREMENT ERROR


"AL1t" - ALARM TYPE : the alarm output can behave in six different ways.

**LoAb** = ABSOLUTE LOW ALARM: The alarm is activated when the process value goes below the alarm threshold set on parameter "AL1" and will be deactivated when it goes above the value [AL1+HAL1].

With this mode is possible to program the minimum and the maximum set of "AL1" by "AL1L" and "AL1H" parameters.

HiAb = ABSOLUTE HIGH ALARM: The alarm is activated when the process value goes higher than the alarm threshold set on parameter "AL1" and will be deactivated when it goes below the value [AL1 - HAL1].

With this mode is possible to program the minimum and the maximum set of "AL1" by "AL1L" and "AL1H" parameters.

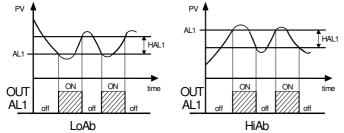


LodE = DEVIATION LOW ALARM: The alarm is activated when the process value goes below the value [SP1 + AL1] and will be deactivated when it goes above the value [SP1 + AL1 + HAL1].

With this mode is possible to program the minimum and the maximum set of "AL1" by "AL1L" and "AL1H" parameters.

HidE = DEVIATION HIGH ALARM: The alarm is activated when the process value goes above the value [SP1 + AL1] and will be deactivated when it goes below the value [SP1 + AL1 - HAL1].


With this mode is possible to program the minimum and the maximum set of "AL1" by "AL1L" and "AL1H" parameters.

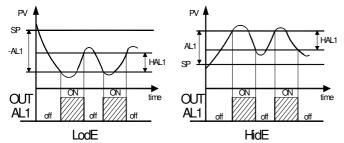

LHAb = ABSOLUTE BAND ALARM: The alarm is activated when the process value goes under the alarm threshold set on parameter "AL1L" or goes higher than the alarm threshold set on parameter

HAL1] or when it goes above the value [AL1L + HAL1].

LHdE = DEVIATION BAND ALARM: The alarm is activated when the process value goes below the value [SP1 + AL1L] or goes above than the value [SP1 + AL1H] and will be deactivated when it goes below the value [SP1 + AL1H - HAL1] or when it goes above the value [SP1 + AL1L + HAL1].

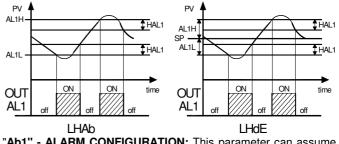


"Ab1" - ALARM CONFIGURATION: This parameter can assume a value between 0 and 15.

The number to be set, which will correspond to the function desired, is obtained by adding the values reported in the following descriptions :

ALARM BEHAVIOUR AT SWITCH ON: the alarm output may behave in two different ways, depending on the value added to par. "Ab1".

+0 = NORMAL BEHAVIOUR: The alarm is always activated when there are alarm conditions.

+1 = ALARM NOT ACTIVATED AT SWITCH ON: If, when switched on, the instrument is in alarm condition, the alarm is not activated. It will be activated only when the process value is in non-alarm conditions and then back in alarm conditions.

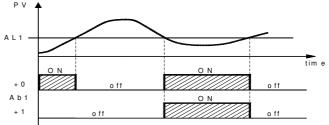

exemple with absolute low alarm

ALARM DELAY: the alarm output may behave in two different ways depending on the value added to par. "Ab1".


+0 = ALARM NOT DELAYED: The alarm is immediately activated when the alarm condition occurs.

+2 = ALARM DELAYED: When the alarm condition occurs, delay counting begins, as programmed on par. "AL1d" (expressed in sec.) and the alarm will be activated only after the elapsing of that time.

ALARM LATCH: : the alarm output may behave in two different ways depending on the value added to par. "Ab1".

+ 0 = ALARM NOT LATCHED: The alarm remains active in alarm conditions only.

+ 4 = ALARM LATCHED: The alarm is active in alarm conditions and remains active even when these conditions no longer exist, until the correctly programmed key "U", ("USrb"=Aac) has been pushed.

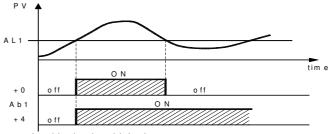



ALARM AKNOWLEDGEMENT: : the alarm output may behave in two different ways depending on the value added to par. "Ab1". + 0 = ALARM NOT AKNOWLEDGED: The alarm always remains

active in alarm conditions.

conditions and can be deactivated by key "U" if properly possible to acknowledge an active alarm (see par. 4.10) programmed ("USrb"=ASi), and also if alarm conditions still exist.

ALARM ACTIVATION IN CASE OF MEASUREMENT

ERROR: This allows one to establish how the alarm have behave in the event of a measurement error (yES=alarm active; no=alarm deactivated).

### 4.11 - LOOP BREAK ALARM FUNCTION

All the parameters referring to the Loop Break alarm function are contained in the group "LbA".

The Loop Break alarm is available on all the instruments, which intervenes when, for any reason (short-circuit of a thermocouple, thermocouple inversion, load interruption), the loop control is interrupted.

First of all, it is necessary to establish to which output the alarm has to correspond.

To do this it is necessary to set the parameter relative to the output to be used ("O1F", "O2F", "O3F") in the group "<sup>1</sup>Out", programming the parameter as :

= ALno if the alarm output has to be ON when the alarm is active while it is OFF when the alarm is not active.

= ALnc if the alarm output has to be ON when the alarm is not active while it is OFF when the alarm is active.

= ALni if the alarm output has to be ON when the alarm is not 4.14 - RS 485 SERIAL INTERFACE active, while it is OFF when the alarm is active but with reverse led indication (led ON= alarm OFF).

Enter group "**LbA**" and program which output the alarm signal has to be addressed to on par. "OLbA",

The Loop Break alarm is activated if the output power remains at the 100% of the value for the time programmed on par. "LbAt" (expressed in sec.).

To avoid false alarms, the value of this parameter has to be set considering the time the plant takes to reach the Set point when the measured value is a long distance from it (for example at the plant start-up)

On alarm intervention, the instrument visualizes the message "LbA" and behaves as in the case of a measurement error giving a power output as programmed on par. "OPE" (programmable in the group "InP").

To restore normal functioning after the alarm, select the control mode "OFF" and then re-program the automatic control ("rEG") after checking the correct functioning of probe and actuator. To exclude the Loop Break alarm, set "OLbA" = OFF.

### 4.12 - FUNCTIONING OF KEY "U"

The function of key "U" can be set through par. "USrb" contained in the group ""PAn".

The parameter can be programmed as :

= **noF** : no function

= tunE : Pushing the key for 1 sec. at least, it is possible to activate/deactivate Auto-tuning or Self-tuning

= OPLO : Pushing the key for 1 sec. at least, it is possible to swap from automatic control (rEG) to manual one (OPLO) and vice versa.

= Aac : Pushing the key for 1 sec. at least, it is possible to acknowledge the alarm. (see par. 4.10)

= ASi : Pushing the key for 1 sec. at least, it is possible to acknowledge an active alarm (see par. 4.10)

= CHSP : Pushing the key for 1 sec. at least, it is possible to select one of the 4 pre-programmed Set Points on rotation.

= OFF : Pushing the key for 1 sec. at least, it is possible to swap from automatic control (rEG) to OFF control (OFF) and vice versa.

### 4.13 - DIGITAL INPUT

The instrument can be equipped with one digital input.

The function of the digital input can be set through par. "diF" contained in the group ""InP".

The parameter can be programmed as :

= **noF** : no function

= Aac : Closing the contact connected to the digital input it is possible to acknowledge the alarm. (see par. 4.10)

+ 8 = ALARM AKNOWLEDGED: The alarm is active in alarm = ASi :Closing the contact connected to the digital input it is

= HoLd :Closing the contact connected to the digital input there is the hold of the measure in that instant (P.A.: not the reading on the display, therefore the indication could settle with a proportional delay to the filter of measure). With the function hold the instrument operate the control in base to the memorized measure.

Reopening the contact the instrument come back to the normal acquisition of the measure.

= OFF : Closing the contact connected to the digital input it is possible to select the OFF control (OFF).

= CHSP :Closing and opening the contact connected to the digital input it is possible to select one of the 4 pre-programmed Set Points on rotation.

= SP1.2 : Closing the contact connected to the digital input it is possible to select as active the set point SP2. Reopening the contact is select as active the set point SP1. This function is possible only when "nSP" = 2, and when is selected it disables the selection of the active set through the parameter "SPAt" and through the key U.

= HE.Co : Closing the contact connected to the digital input it is possible to select as active the set point SP2 in "CooL" mode. Reopening the contact is select as active the set point SP1 in "HEAt" mode. This function is possible only when "nSP" = 2.


The instrument can be equipped with a RS 485 serial communication interface, by means of which it is possible to connect the regulator with a net to which other instruments (regulators of PLC) are connected, all depending typically on a personal computer used as plant supervisor. Using a personal computer it is possible to acquire all the function information and to program all the instrument's configuration parameters. The software protocol adopted for TLK72 is a MODBUS RTU type, widely used in several PLC and supervision programs available on the market (TLK series protocol manual is available on request).

The interface circuit allows the connection of up to 32 instruments on the same line.

To maintain the line in rest conditions a 120 Ohm resistance (Rt) must be connected to the end of the line.

The instrument is equipped with two terminals called A and B which have to be connected with all the namesake terminals of the net. For the wiring operation they must be interlaced with a double cable (telephonic type).

Nevertheless, particularly when the net results very long or noised and being present potential differences between the GND terminals, it is advisable to adopt a screened cable wired as in the drawing. HOST

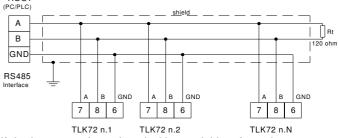

If the instrument is equipped with a serial interface, the parameters to be programmed are the following, all present in the parameters group "SEr" :

"Add" : Address of the station. Set a different number for each station, from 1 to 255.

"baud" : Transmission speed (baud-rate), programmable from 1200 to 38400 baud. All the stations have to have the same transmission speed.

"PACS" : Programming access. If programmed as "LoCL" this means that the instrument is only programmable from the keyboard, if programmed as "LorE" it is programmable both from the keyboards and serial line.

If an attempt is made to enter the programming from the keyboard whilst a communication through the serial port is in progress the instrument will visualise "buSy" to indicate the busy state.


### 4.15 - PARAMETERS CONFIGURATION BY "A01"

The instrument is equipped with a connector that allows the transfer from and toward the instrument of the functioning parameters through the device **A01** with **5 poles** connector.


This device it's mainly useable for the serial programming of the instruments which need to have the same parameters configuration or to keep a copy of the programming of an instrument and allow its rapid retransmission.

To use the device A01 it's necessary that the device or instrument are being supplied.

Instrument supplied and device not supplied



Instrument supplied from the device



**<u>P.A.</u>**: For the instruments equipped with RS485 serial communication, it's indispensable that the parameter "PACS" is programmed = LorE.

To transfer the configuration of an instrument into the device **(UPLOAD)** it is necessary to proceed in the following way:

1) position both dip switch of A01 in the **OFF** mode.

2) connect the device to the instrument TLK plugging the special connector.

3) verify that the instrument or the device are supplied

4) observe the indication led on the device A01: if it results green this means that a configuration is already loaded on the device while if it results green blinking or red blinking this means that it has not been loaded any valid configuration on the device .

5) press the button placed on the device.

6) observe the indication led : after having pressed the button, the led becomes red and therefore, at the end of the data transfer, it becomes green.

7) now it is possible to disconnect the device.

To transfer the configuration loaded on the device onto an instrument of the same family (DOWNLOAD), it is necessary to proceed in the following way:

1) position both dip switch of A01 in the **ON** mode.

2) connect the device to an instrument TLK having the same features of the one from which has been downloaded the desired configuration, plugging the special connector.

3) verify that the instrument or the device are supplied

4) observe the indication led on the device A01: it has to result green, because if the led results green blinking or red blinking, this means that on the device it has not been downloaded any valid configuration and therefore it's useless to continue.

5) if the les results green, press the button placed on the device.

6) observe the indication led : after having pressed the button, the led becomes red and therefore, at the end of the data transfer, it becomes green.

7) now it is possible to disconnect the device.

For additional info, please have a look at the A01 instruction manual.

### 5 - PROGRAMMABLE PARAMETERS TABLE

Here following are described all the parameters available on the instrument. Some of them could be not present or because they are

depending on the type of instrument or because they are automatically disabled as unnecessary

	Group " <sup>1</sup> SI		P" (parameters relative to			
Par.		Par.	Description	Range	Def.	Note
	1			1 ÷ 4	1	
		programmable Set point				
	2	SPAt	Active Set point	1 ÷ nSP	1	
	3	SP1	Set Point 1	SPLL ÷ SPHL	0	
					-	
	4			SPLL ÷ SPHL	0	
	5 <b>SP3</b>		Set Point 3	SPLL ÷ SPHL	0	
	6	SP4	Set Point 4	SPLL ÷ SPHL	0	
	7	SPLI	Low Set Point	-1999 ÷ SPHL	-1999	
				SPLL ÷ 9999		
	8	SPAL	High Set Point		9999	
	Gro	up "'I	nP" (parameters relative			
		Par.	Description	Range	Def.	Note
	9	SEnS	Probe type:	input C :	J	
	-		J= thermocoupled J	J / CrAL / S /		
			CrAL= termocoupled K	Ir.J / Ir.CA /		
			S= thermocoupled S	Pt1 / 0.50 /		
			Ir.J=Infrared Sen. IRS J	0.60 / 12.60	-	
			Ir.CA= Infrared Sen.	input E :	Ptc	
			IRS K	J / CrAL / S /		
			Pt1= thermores. Pt100	Ir.J / Ir.CA /		
			0.50= 050 mV	Ptc / ntc /		
			0.60= 060 mV	0.50 / 0.60 /		
			12.60= 1260 mV	12.60		
			Ptc= thermistor PTC	input I :	4.20	
			KTY81-121	0.20 / 4.20	7.20	
			ntc= thermistor NTC		0.10	
				<u>input V :</u>	0.10	
,			103-AT2	0.1/		
			0.20= 020 mA	0.5 / 1.5 /		
			4.20= 420 mA	0.10 / 2.10		
			0.1= 01 V			
			0.5=05 V			
			1.5= 15 V			
			0.10= 010 V			
			2.10= 210 V			
	10	SSC	Low scale limit in case	-1999 ÷ FSC	0	
	10	330		-1999 ÷ FOC	U	
			of input with V / I			
			signals		_	
	11	FSC	High scale limit in case	SSC ÷ 9999	0	
			of input with V / I			
			signals			
	12	dP	Number of decimal	Pt1 / Ptc / ntc:	0	
	. –		figures	0 / 1	v	
				norm sig.:		
	10		The second se	0÷3	~~	
	13	Unit	Temperature unit of	°C / °F	°C	
			measurement			
	14	FiL	Input digital filter	0FF÷ 20.0	1.0	]
				sec.		
	15	OFSt	Measuring Offset	-1999 ÷ 9999	0	
	16	rot	Rotation of the	0.000 ÷ 2.000	1.000	
	10	101	measuring straight line	5.000 ÷ 2.000	1.000	
	4-	1		0	017	
	17	InE	"OPE" functioning in	Our / Or / Ur	OUr	
			case of measuring error			
	18	OPE	Output power in case of		0	
			measuring error	%		
	19	dIF	Digital input function:	noF / AaC /	noF	
	-		noF = No Function	ASi / HoLd /		
			Aac= Reset Alarms	OFF / CHSP /		
			latch	SP1.2/		
				HE.Co		
			ASi= Aknowledged	HE.U0		
			Alarms			
			HoLd = Hold Measure			
			OFF= Control OFF			
			CHSP = Sel. Set Point			
			SP1.2 = Sel. SP1/SP2			
			HE.Co = Sel. Heat-			
			SP1/Cool -SP2			
				1		

Gro	0 <sup>[</sup> "au	ut" (parameters relative to	o the outputs)			40	AL2i	Alarm AL2 activation in	no / yES	no	
Par.		Description	Range	Def.	Note			case of measuring error	,		
20	O1F	Functioning of output 1:	1.rEG / 2.rEG	1.rEG		Gro	up "1	AL3" (parameters relative	to alarm AL3)		
		1.rEG= Control output 1	ALno / ALnc				Par.	Description	Range	Def.	Note
		2.rEG= Control output 2	ALni / OFF			41	OAL3	Output where alarm	Out1 / Out2	OFF	
		ALno= Alarm Out						AL3 is addressed	Out3 / OFF		
		normally opened				42	AL3t	Alarm AL3 type:	LoAb / HiAb	LoAb	
		ALnc= Alarm Out						see "AL1t"	LHAb / LodE		
		normally closed ALni= Alarm Out				10			HidE / LHdE		
		normally closed with				43	Ab3	Alarm AL3 functioning:	0 ÷ 15	0	
		reverse led func.				4.4	AL 0	see "Ab1"		0	
21	O2F	Functioning of output 2:	1.rEG / 2.rEG	ALno		44 45	AL3	Alarm AL3 threshold Low threshold band	AL3L÷ AL3H	0 -1999	
		see "O1F"	ALno / ALnc	-		45	AL3L	Low threshold band alarm AL3 or Minimum	-1999 ÷ AL3H	-1999	
			ALni / OFF					set alarm AL3 for high			
22	O3F	Functioning of output 3:	1.rEG / 2.rEG	ALno				or low alarm			
		see "O1F"	ALno / ALnc			46	AL3H		AL3L ÷ 9999	9999	
			ALni / OFF			_		alarm AL3 or Maximum			
		AL1" (parameters relative						set alarm AL3 for high			
	Par.	Description	Range	Def.	Note			or low alarm			
23	OAL1	Output where alarm	Out1 / Out2	Out2		47		Alarm AL3 Hysteresis	OFF ÷ 9999	1	
0.4	A1 41	AL1 is addressed	Out3 / OFF		<u> </u>	48	AL3d	Activation delay of	OFF ÷ 9999	OFF	
24	AL1t	Alarm AL1 type: LoAb= Absolute Low	LoAb / HiAb LHAb / LodE	LoAb				alarm AL3	sec.		
		LOAD= Absolute Low HiAb= Absolute High	HidE / LHdE			49	AL3i	Alarm AL3 activation in	no / yES	no	
		LHAb= Absolute Band					"	case of measuring error		<b></b>	
		LodE= Deviation Low						LbA" (parameters relative		,	
		HidE= Deviation High					Par.	Description	Range	Def.	Note
		LHdE= Deviation Band				50	OLbA	•	Out1 / Out2	OFF	
25	Ab1	Alarm AL1 functioning:	0 ÷ 15	0		51	I h At	LbA is addressed Time necessary to	Out3 / OFF OFF ÷ 9999	OFF	
		+1 = not activated at				51	LDAI	activate alarm LbA	Sec.	OFF	
		power on				Gro	un "]	rEG" (parameters relative			
		+2 = delayed					Par.	Description	Range	Def.	Note
		+4 = latch					-	Control type:	Pid / On.FA	Pid	Hote
00	AL 4	+8 = aknowledged		0		52	00111	Pid= PID	On.FS / nr	1 IG	
26 27	AL1 AL1L	Alarm AL1 threshold Low threshold band	AL1L÷ AL1H -1999 ÷ AL1H	0 -1999				On.FA= ON/OFF asym.	00,		
21	ALIL	alarm AL1 or Minimum	-1999 ÷ ALIH	-1999				On.FS= ON/OFF sym.			
		set alarm AL1 for high						nr= Neutral Zone			
		or low alarm						ON/OFF			
28	AL1H	High threshold band	AL1L ÷ 9999	9999		53	Func	Functioning mode	HEAt / CooL	HEAt	
		alarm AL1 or Maximum						output 1.rEG			
		set alarm AL1 for high				54	HSEt	Hysteresis of ON/OFF	0 ÷ 9999	1	
		or low alarm						control (or end Soft			
		Alarm AL1 hysteresis	OFF ÷ 9999	1		55	004	Start cycle threshold)		OFF	
30	AL1d	Activation delay of	OFF ÷ 9999	OFF		55	CPdt	Compressor Protection time for 2.rEG	OFF÷ 9999	OFF	
		alarm AL1	sec.			56	Auto		sec. OFF /	1	
31	AL1i	Alarm AL1 activation in	no / yES	no		50	7010	OFF = Not active	1/2/3/4	I	
	"1	case of measuring error		<u> </u>				1 = Start each power on	., 2, 0, 7		
		AL2" (parameters relative		Def	Nete			2= Start at first power			
	Par.	Description	Range	Def.	Note			on			
32	UAL2	Output where alarm AL2 is addressed	Out1 / Out2 Out3 / OFF	OFF				3= Start manually			
33	ΔI 2+	Alarm AL2 type:	LoAb / HiAb	LoAb	<u> </u>			4= Start after Soft Start			
55		see "AL1t"	LUAD / HIAD	LUAD			0=:=	or change Set Point	. ==		
			HidE / LHdE			57	SELF	Selftuning enable	no / yES	no	
34	Ab2	Alarm AL2 functioning:	0 ÷ 15	0		58	Pb	Proportional band	0 ÷ 9999	50	<u> </u>
[ <sup>-</sup> .]		see "Ab1"		-		59	Int	Integral time	OFF ÷ 9999	200	
35	AL2	Alarm AL2 threshold	AL2L÷ AL2H	0		60	dEr	Derivative time	sec. OFF÷ 9999	50	
	AL2L		-1999 ÷ AL2H	-1999		00	uEr		OFF÷ 9999 sec.	50	
36						61	FuO <sub>2</sub>	Fuzzy overshoot control	0.00 ÷ 2.00	0.5	-
36		alarm AL2 or Minimum					tcr1				
36		set alarm AL2 for high								20.0	
		set alarm AL2 for high or low alarm				62		Cycle time of output	0.1 ÷ 130.0 sec	20.0	
	AL2H	set alarm AL2 for high or low alarm High threshold band	AL2L ÷ 9999	9999				1.rEg	sec.		
	AL2H	set alarm AL2 for high or low alarm High threshold band alarm AL2 or Maximum	AL2L ÷ 9999	9999		63	Prat	1.rEg Power ratio 2.rEg /		20.0	
	AL2H	set alarm AL2 for high or low alarm High threshold band alarm AL2 or Maximum set alarm AL2 for high	AL2L ÷ 9999	9999			Prat	1.rEg Power ratio 2.rEg / 1.rEg	sec. 0.01 ÷ 99.99	1.00	
37		set alarm AL2 for high or low alarm High threshold band alarm AL2 or Maximum set alarm AL2 for high or low alarm				63		1.rEg Power ratio 2.rEg /	sec.		
37	HAL2	set alarm AL2 for high or low alarm High threshold band alarm AL2 or Maximum set alarm AL2 for high or low alarm Alarm AL2 Hysteresis	OFF ÷ 9999	1		63	Prat	1.rEg Power ratio 2.rEg / 1.rEg	sec. 0.01 ÷ 99.99 0.1 ÷ 130.0	1.00	
37	HAL2	set alarm AL2 for high or low alarm High threshold band alarm AL2 or Maximum set alarm AL2 for high or low alarm				63 64	Prat tcr2	1.rEg Power ratio 2.rEg / 1.rEg Cycle time of 2.rEg	sec. 0.01 ÷ 99.99 0.1 ÷ 130.0 sec.	1.00 10.0	

66	SLor	Gradient of first ramp:	0.00 ÷ 99.99	InF	
	InF= Ramp not active		/ InF		
			unit/min.		
07		Duration times both an		Les E	
67	dur.t	Duration time between	0.00 ÷ 99.59	InF	
		two ramps	/ InF		
		InF= Time not active	hrsmin.		
68	SLoF	Gradient of second	0.00 ÷ 99.99	InF	
		ramp:	/ InF		
		InF= Ramp not active	unit / min.		
69	St.P	Soft-Start power	-100 ÷ 100 %	0	
70		Soft-Start time		OFF	
70	SSt	Soit-Start lime	OFF/	OFF	
			0.1÷7.59 / InF		
			hrsmin.		
Gro	up"l	PAn" (parameters relative	to the user inte	erface)	
	Par.	Description	Range	Def.	Note
71	USrb	Functioning of key "U" :	noF / tunE /	noF	
<i>'</i> '	0010	noF = No Function	OPLO / Aac /	1101	
		tune= Start Autotuning	ASi / CHSP /		
		or Selftuning	OFF		
		OPLO= Manual Control			
		(open loop)			
		Aac= Reset Alarms			
		latch			
		ASi= Aknowledged			
		Alarms			
		OFF= Control OFF			
70	-l'OD				
72	diSP	Variable visualized on	dEF / Pou /	dEF	
		the display:	SP.F / SP.o /		
		dEF= Process Value	AL1 / AL2 /		
		Pou= Control Power	AL3		
		SP.F= Active Set Value			
		SP.o = Operative Set			
		value			
		AL1 = AL1 threshold			
		AL1 = AL1 threshold AL2 = AL2 threshold			
		AL2 = AL2 Inreshold			
		AL3 = AL3 threshold			
73	AdE		OFF9999	2	
	AdE	AL3 = AL3 threshold	OFF99999	2	
73 74	AdE Edit	AL3 = AL3 threshold Shift value for the shift index functioning	OFF9999 SE / AE /	2 SAE	
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set			
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms:	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and	SE / AE /		
		AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be	SE / AE /		
74	Edit	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified	SE / AE / SAE / SAnE	SAE	
74 Gro	Edit	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds cannot be modified Er" (parameters relative the sholds can be	SE / AE / SAE / SAnE	SAE	,
74 Gro	Edit	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified	SE / AE / SAE / SAnE	SAE	tion) Note
74 Gro	Edit	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds cannot be modified Er" (parameters relative the sholds can be	SE / AE / SAE / SAnE	SAE	,
Gro	Edit	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAnE= Active Set and alarm thresholds cannot be modified <b>Er</b> " (parameters relative the <b>Description</b> Station address in case	SE / AE / SAE / SAnE to the serial con Range	SAE nmunica Def.	,
74 Gro	Edit Up " <sup>]</sup> S Par. Add	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAnE= Active Set and alarm thresholds cannot be modified SAnE= Active Set and alarm thresholds cannot be modified SEr" (parameters relative for the set of	SE / AE / SAE / SAnE	SAE nmunica Def. 1	,
Gro	Edit	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       Station address in case       of serial communication       Transmission     speed	SE / AE / SAE / SAnE	SAE nmunica Def.	,
74 Gro	Edit Up " <sup>]</sup> S Par. Add	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAnE= Active Set and alarm thresholds cannot be modified SAnE= Active Set and alarm thresholds cannot be modified SEr" (parameters relative for the set of	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       Setation address in case       of serial communication       Transmission     speed       (Baud rate) </th <th>SE / AE / SAE / SAnE SAE / SAnE</th> <th>SAE nmunica Def. 1 9600</th> <th>,</th>	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,
74 Gro	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       Scannot       be modified       Setation address in case       of serial communication       Transmission     speed       (Baud rate)	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       Setation address in case       of serial communication       Transmission     speed       (Baud rate) </th <th>SE / AE / SAE / SAnE SAE / SAnE</th> <th>SAE nmunica Def. 1 9600</th> <th>,</th>	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       Setation address in case       of serial communication       Transmission     speed       (Baud rate)       Access at the       programming through	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAE= Active Set and       alarm thresholds cannot       be modified       Station address in case       of serial communication       Transmission     speed       (Baud rate)       Access at the       programming through       serial port:	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold Shift value for the shift index functioning Fast progr. Active Set and alarms: SE= Active Set can be modified while the alarm thresholds cannot be modified AE= Active Set cannot be modified while the alarm thresholds can be modified SAE= Active Set and alarm thresholds can be modified SAnE= Active Set and alarm thresholds can be modified SAnE= Active Set and alarm thresholds cannot be modified SAnE= Active Set and alarm thresholds cannot be modified Seriel communication Transmission speed (Baud rate) Access at the programming through serial port: LoCL = No (Local only)	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,
74 Gro 75 76	Edit Edit Par. Add baud	AL3 = AL3 threshold       Shift value for the shift       index functioning       Fast progr. Active Set       and alarms:       SE= Active Set can be       modified while the alarm       thresholds cannot be       modified       AE= Active Set cannot       be modified while the       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds can be       modified       SAE= Active Set and       alarm thresholds cannot       be modified       SAnE= Active Set and       alarm thresholds cannot       be modified       SAE= Active Set and       alarm thresholds cannot       be modified       Station address in case       of serial communication       Transmission     speed       (Baud rate)       Access at the       programming through       serial port:	SE / AE / SAE / SAnE SAE / SAnE	SAE nmunica Def. 1 9600	,

### 6 - PROBLEMS, MAINTENANCE AND GUARANTEE

6.1 - ERROR SIGNALLING					
Error	Reason	Action			
	Probe interrupted	Verify the correct			
uuuu	The measured variable is under the probe's limits (under-range)	connection between probe and instrument and then verify the correct			
0000	The measured variable is over the probe's limits (over-range)	functioning of the probe			
ErAt	Auto-tuning not possible because the process value is too higher or too lower	Push key "P" in order to make the error message disappear. Once the error has been found, try to repeat the auto-tuning.			
noAt	Auto-tuning not finished within 12 hours				
LbA	Loop control interrupted (Loop break alarm)	Check the working of probe and actuator and swap the instrument to (rEG) control			
ErEP	Possible anomaly of the EEPROM memory	Push key "P"			

In error conditions, the instrument provides an output power as programmed on par. "OPE" and activates the desired alarms, if the relative parameters "ALni" have been programmed = yES.

### 6.2 - CLEANING

We recommend cleaning of the instrument with a slightly wet cloth using water and not abrasive cleaners or solvents which may damage the instrument.

### 6.3 - WARRANTY AND REPAIRS

The instrument is under warranty against manufacturing flaws or faulty material, that are found within 18 months from delivery date. The warranty is limited to repairs or to the replacement of the instrument. The eventual opening of the housing, the violation of the instrument or the improper use and installation of the product will bring about the immediate withdrawal of the warranty's effects.

In the event of a faulty instrument, either within the period of warranty, or further to its expiry, please contact our sales department to obtain authorisation for sending the instrument to our company. The faulty product must be shipped to Ascon Tecnologic with a detailed description of the faults found, without any fees or charge for Ascon Tecnologic, except in the event of alternative agreements.

### 7 - TECHNICAL DATA

### 7.1 - ELECTRICAL DATA

Power supply: 24 VAC/VDC, 100... 240 VAC +/- 10% Frequency AC: 50/60 Hz

Power consumption: 5 VA approx.

Input/s: 1 input for temperature probes: tc J,K,S; infrared sensors ZIS J e K; RTD Pt 100 IEC; PTC KTY 81-121 (990  $\Omega$  @ 25 °C); NTC 103AT-2 (10K $\Omega$  @ 25 °C) or mV signals 0...50 mV, 0...60 mV, 12 ...60 mV or normalized signals 0/4...20 mA, 0..1 V, 0/1...5 V, 0/2...10 V. 1 digital input for free voltage contacts.

Normalized signals input impedance: 0/4..20 mA: 51  $\Omega;\,$  mV and V: 1  $M\Omega$ 

<u>Output/s:</u> Up to 3 outputs. Relay OUT1 SPDT (8 A-AC1, 3 A-AC3 / 250 VAC),OUT2 and 3 SPST-NO (8 A-AC1, 3 A-AC3 / 250 VAC) ; or in tension to drive SSR (8mA/ 8VDC).


Auxiliary supply output: 12 VDC / 20 mA Max.

Electrical life for relay outputs: 100000 operat.

Installation category: II Measurement category: I

<u>Protection class against electric shock:</u> Class II for Front panel <u>Insulation:</u> Reinforced insulation between the low voltage section (supply and relay outputs) and the front panel; Reinforced insulationbetween the low voltage section (supply and relay outputs) and the extra low voltage section (inputs, SSR outputs); No insulation between input and SSR outputs; 50 V insulation between RS485 and extra low voltage section. <u>Housing:</u> Self-extinguishing plastic, UL 94 V0 <u>Dimensions:</u> 72 x 72 mm DIN, depth 97 mm <u>Weight:</u> 215 g approx. <u>Mounting:</u> Flush in panel in 67 x 67 mm hole <u>Connections:</u> extractable 2,5 mm<sup>2</sup> screw terminal block <u>Degree of protection of front panel :</u> IP 54 mounted in panel with gasket <u>Pollution situation:</u> Normal <u>Operating temperature:</u> 0 ... 50 °C <u>Operating humidity:</u> 30 ... 95 RH% without condensation <u>Storage temperature:</u> -10 ... +60 °C

# 7.3 - MECHANICAL DIMENSIONS, PANEL CUT-OUT AND MOUNTING [mm]

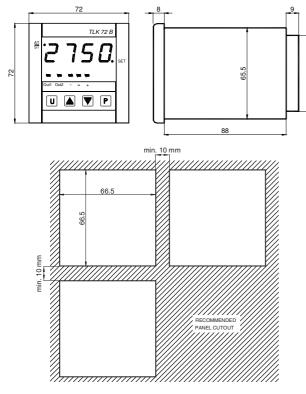

# MAX. 5 mm

### 7.4 - FUNCTIONAL FEATURES

 $\underline{\text{Control:}}$  ON/OFF, ON/OFF Neutral Zone, PID single Action, PID double action.

Measurement range: according to the used probe (see range table) Display resolution: according to the probe used 1/0,1/0,01/0,001 Overall accuracy: +/- (0,5 % fs + 1 digit) ; tc S: +/- (1 % fs + 1 digit) Max cold junction compensation drift (in tc) : \_0,1 °C/°C with operating temperature 0 ... 50 °C after warm-up of 20 min. Sampling rate: 130 ms. Serial Interface : RS485 insulated Communication protocol: MODBUS RTU (JBUS) Baud rate: Programmable from 1200 ... 38400 baud Display: 4 Digit Red h 14 mm Compliance: ECC directive EMC 89/336 (EN 61326), ECC directive LV 73/23 and 93/68 (EN 61010-1) Approvals: C-UL (file n. E206847)

7.5 - MEASURING RANGE TABLE

INPUT	"dP" = 0	"dP"= 1, 2, 3
tc J	0 1000 ℃	
"SEnS" = J	32 1832 °F	
tc K	0 1370 ℃	
"SEnS" = CrAl	32 2498 °F	
tc S	0 1760 ℃	
"SEnS" = S	32 3200 °F	
Pt100 (IEC)	-200 850 ℃	-199.9 850.0 ℃
"SEnS" = Pt1	-328 1562 °F	-199.9 999.9 °F
PTC (KTY81-121)	-55 150 ℃	-55.0 150.0 ℃
"SEnS" = Ptc	-67 302 °F	-67.0302.0 °F
NTC (103-AT2)	-50 110 ℃	-50.0 110.0 ℃
"SEnS" = ntc	-58 230 °F	-58.0 230.0 °F
020 mA		
"SEnS" = 0.20		
420 mA "SEnS" = 4.20		
3EnS = 4.20 0 50 mV		
"SEnS" = 0.50		
0 60 mV		
"SEnS" = 0.60		-199.9 999.9
12 60 mV	-1999 9999	-19.99 99.99
"SEnS" = 12.60	-1000 0000	-1.999 9.999
0 1 V		1.000 0.000
"SEnS" = 0.1		
0 5 V		
"SEnS" = 0.5		
1 5 V "SEpS" – 1 5		
"SEnS" = 1.5 0 10 V		
"SEnS" = 0.10		
2 10 V		
"SEnS" = 2.10		

### 7.6 - INSTRUMENT ORDERING CODE

### TLK72 a b c d e f g hh i <u>a : POWER SUPPLY</u>

- L = 24 VAC/VDC
- **H** = 100... 240 VAC

### b : INPUT

- **C** = thermocouples (J, K, S, I.R), mV, thermoresistances (Pt100) **E** = thermocouples (J, K, S, I.R.), mV, thermistors (PTC, NTC)
- I = normalized signals 0/4..20 mA
- V = normalized signals 0..1 V, 0/1..5 V, 0/2..10 V.

c : OUTPUT OUT1

- R = Relay
- **O** = VDC for SSR
- d: OUTPUT OUT2
- **R** = Relay **O** = VDC for SSR
- $\mathbf{O} = \mathbf{V} \mathbf{D} \mathbf{O}$  for  $\mathbf{S}$
- e : OUTPUT OUT3
- R = Relay
- $\mathbf{O} = VDC$  for SSR

## - = None

<u>**f**</u> : **COMMUNICATION INTERFACE S** = RS 485 Serial interface

- = No interface

g : DIGITAL INPUT

I = digital input

- = None

hh: SPECIAL CODES i: SPECIAL VERSIONS

# TLK 72 PASSWORD = 381