



e30-

DIGITAL ELECTRONIC TEMPERATURE CONTROLLER WITH DEFROSTING FUNCTION



OPERATING INSTRUCTIONS

22/12 - Code: ISTR_M_e30-_E_03_--

ASCON TECNOLOGIC S.r.l.

Viale Indipendenza 56, 27029 - VIGEVANO (PV) ITALY

Tel.: +39 0381 69871 - Fax: +39 0381 698730

<http://www.ascontecnologic.com>

info@ascontecnologic.com

PREFACE



This manual contains the information necessary for the product to be installed correctly and also instructions for its maintenance and use; we therefore recommend that the utmost attention is paid to the following instructions and to save it.

This document is the exclusive property of Ascon Tecnologic S.r.l. which forbids any reproduction and divulgation, even partially, of the document, unless expressly authorized.

Ascon Tecnologic S.r.l. reserves the right to make any formal or functional changes at any moment and without any notice.

Ascon Tecnologic S.r.l. and its legal representatives do not assume any responsibility for any damage to people, things or animals deriving from violation, wrong or improper use or in any case not in compliance with the instrument features.



Whenever a failure or a malfunction of the device may cause dangerous situations for persons, thing or animals, please remember that the plant has to be equipped with additional electromechanical devices which will guarantee safety.

Index

1. Instrument description	1
1.1 General description.....	1
1.2 Front panel pescription	2
2. Programming	2
2.1 Fast Set point programming.....	2
2.2 Standard mode parameters programming.....	2
2.3 Parameter protection using the password.....	3
2.4 Customized mode parameter programming (parameters programming level)	3
2.5 Reset parameters to default value	3
2.6 Keyboard lock function.....	3
3. Usage warnings.....	4
3.1 Admitted use.....	4
4. Installation warnings.....	4
4.1 Mechanical mounting.....	4
4.2 Dimensions [mm]	4
4.3 Mounting	4
4.4 Electrical connections	5
5. Functions	5
5.1 ON/Stand-by function.....	5
5.2 Normal and Economic operation.....	5
5.3 Measure and display configuration	6
5.4 Digital input configuration.....	6
5.5 Temperature control	6
5.6 Compressor protection function and power-on delay.....	7
5.7 Defrost control.....	7
5.8 Alarm functions	8
5.9 Function of keys and /Aux	8
6. Accesories	9
6.1 Parameters configuration by A01.....	9
6.2 Parameters configuration by AFC1	9
7. Programmable parameters table.....	10
8. Problems and maintenance.....	11
8.1 Notifications	11
8.2 Cleaning.....	11
8.3 Disposal	11
9. Warranty and Repairs	11
10. Technical data.....	11
10.1 Electrical characteristics	11
10.2 Mechanical characteristics.....	11
10.3 Functional features	12
11. How to order	12

1. INSTRUMENT DESCRIPTION


1.1 General description

The model **e30** is a microprocessor based digital electronic temperature controller that is typically used in cooling applications with **ON/OFF temperature control** and **defrost control** with intervals time by **stopping compressor**.

The instrument has **1 relay output** and **2 NTC temperature probes** inputs **one of which** can be **configured as digital input**.

The operating parameters configuration can be made through the **keypad**, through the **A01** device connected to the **TTL port** (standard) or using the **NFC** communication (optional).

1.2 Front panel description

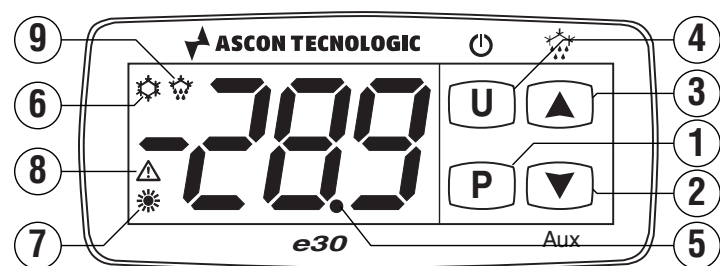

- 1 **[P]**: Used for setting the Set point (short press) and for programming the function parameters (pressed for 5 s). In programming mode is used to enter in parameters edit mode and confirm the values. In programming mode **[P]** can be used together with the **[▲]** key to change the programming level of the parameters. When the keyboard is locked, the keys **[P]** and **[▲]** used together (hold pressed for 5 s), unlock the keyboard.
- 2 **[▼]/Aux**: In programming mode is used for decreasing the values to be set and for selecting the parameters. If programmed with parameter $\mathcal{L}Fb$, when pressed for 1 s during normal operation mode, it can perform other functions such as select **Normal/Eco** mode or turn **ON/OFF** (Stand by) the instrument (see "Functions of keys **[U]/[○]** and **[▼]/Aux**").
- 3 **[▲]/☼**: In normal mode (pressed for 5 s) can be used to **start/stop manual defrosting** (☼). In programming mode is used for increasing the values to be set and for selecting the parameters. In programming mode can be used together with **[P]** key to change parameters level. Pressed together with the **[P]** key for 5 s allows the keyboard unlock.
- 4 **[U]/[○]**: Used (short press) for displaying the instrument variables (measured temperatures etc.). In programming mode can be used to return in normal mode (hold for 2 s). If programmed with parameter $\mathcal{L}UF$, when pressed for 1 s during normal operation mode, it can perform other functions such as select **Normal/Eco** mode or turn **ON/OFF** (Stand by) the instrument (see "Functions of keys **[U]/[○]** and **[▼]/Aux**").
- 5 **LED dp/Stand by**: When the instrument is placed in Stand by mode, this is the only lighted LED. During the normal operation is the decimal point. In programming mode, while the parameter code is displayed, the dot indicates the parameter protection level: **not protected** (lit up), **protected** (flashing) and **hidden** (turned OFF).
- 6 **LED ☼**: Indicates the output status (compressor or temperature control device) when the instrument is programmed for **cooling operation**; **ON** (lit up), **OFF** (turned OFF) or **inhibited** (flashing).
- 7 **LED ☼**: Indicates the output status (compressor or temperature control device) when the instrument is programmed for **heating operation**; **ON** (lit), **OFF** (turned OFF) or **inhibited** (flashing).
- 8 **LED ▲**: Indicates the **alarm status**: **ON** (lit), **OFF** (turned OFF) or **silenced** (flashing).
- 9 **LED ☼**: Indicates that the **defrost** is **in progress**.

2. PROGRAMMING

2.1 Fast Set point programming

The normal mode to program the setpoint is done by momentarily pressing the **[P]** key, the display shows SP (or SPE) alternated to the programmed value.

To change it press the **[▲]** key to increase the value or **[▼]** to decrease it

These keys increase or decrease the value one digit at a time, but if the button is pressed for more than one second the value increase or decreases rapidly and after two seconds the speed increases even more in order to quickly reach the desired value.

However, through $\mathcal{L}Ed$ parameter you can determine if and which Set point can be set with the **[P]** key rapid procedure.

The parameter can have the following values:

oF SP/SPE cannot be changed with the **[P]** key rapid procedure (pressing/releasing the **[P]** key, nothing happens);

- 1 Only SP can be set with this procedure ("normal" Set Point);
- 2 Only SPE can be set with this procedure ("economic"/Eco Set Point);
- 3 Both SP and SPE can be set with this procedure;
- 4 To select the Active Setpoint (SP or SPE).

For example, in case the parameter $\mathcal{L}Ed = 1$ or **3**, the procedure is the following:

Press and release the **[P]** key, the display shows SP alternated to the Set Point value. To change the Set Point, press the **[▲]** key to increase the value or **[▼]** to decrease it

If only Set Point 1 is present ($\mathcal{L}Ed = 1$), once the desired value is set, press the **[P]** button to exit the fast programming mode.

If also the "Economic" Set Point ($\mathcal{L}Ed = 3$) can be set, pressing and releasing again the **[P]** button the display shows SPE alternated to its programmed value.

To change the value use the **[▲]** and **[▼]** keys as for the SP Set Point value. Once the desired value is correctly set, press the **[P]** button to exit the fast Set Point change.

To exit the fast Setpoint programming mode push the **[P]** key after the last Set Point has been displayed or pressing no buttons for about 10 s, after which the display returns to normal operation.

2.2 Standard mode parameters programming


To access the instrument function parameters when password protection is disabled, press the key **[P]** and keep it pressed for about 5 seconds, after which the display shows the code that identifies the first programmable parameter

The desired parameter can be selected using the **[▲]/[▼]** keys, then, pressing the **[P]** key, the display shows the parameter code alternated to its value that can be changed with the **[▲]** and **[▼]** keys.

Once the desired value has been set, press the key **[P]** again: the new value is stored and the display shows only the code of the selected parameter

Pressing the **[▲]** and **[▼]** keys, it is possible to select another parameter and change it as described.

To exit the programming mode, press no keys for about 30 s or keep the **[U]** key pressed for 2 s.

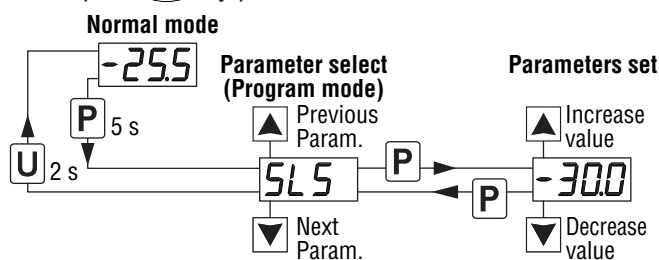

2.3 Parameter protection using the password


The instrument has a parameter protection function using a password that can be personalised through the ℓ^{PP} parameter. To protect the parameters, set the desired password number in the parameter ℓ^{PP} .

When the protection is activate, press the **[P]** key to access the parameters and keep it pressed for about 5 s, after which the display shows ℓ^{PP} .

Press the **[P]** key, the display shows \square , using the **[▲]**/**[▼]** keys, insert the programmed password number and press the key **[P]** again.

If the password is correct the instrument displays the code of the first parameter and it will be possible to program the instrument in the same way described in the previous section.

The password protection can be disabled by setting $\ell^{PP} = \text{oF}$.

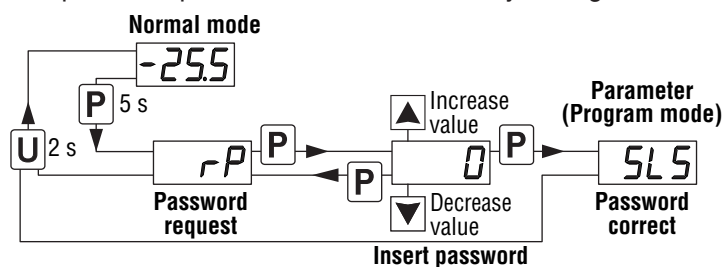

Note: If the Password gets lost, just switch OFF and ON the instrument, push **[P]** key during the initial test keeping it pressed for 5 s. In this way it is possible to access all the parameters, verify and modify the parameter ℓ^{PP} .

2.4 Customized mode parameter programming (parameters programming level)

The password hides all the configuration parameters behind a factory set password to avoid unwanted changes to the controller parameters. To make a parameter accessible without having to enter the password when ℓ^{PP} password protection is activate, use the procedure that follows:


Enter the program mode using the ℓ^{PP} Password and select the parameter that must be accessible (no password protection).

Once a parameter is selected, if the **dp LED flashes** the parameter is programmable by entering the password (is “protected”). If the **dp LED is steady ON** the parameter is programmable without password (is “unprotected”).

To change the parameter visibility, press the **[P]** key and keeping it pressed also press the **[▲]** button.

The **dp LED** changes its state indicating the new level of parameter accessibility (**ON** = not protected; **flashing** = password protected).

In case some parameters are not protected, accessing the the programming mode the display first shows the not protected parameters, then the ℓ^{PP} parameter (through which will be possible to access the “protected” parameters).

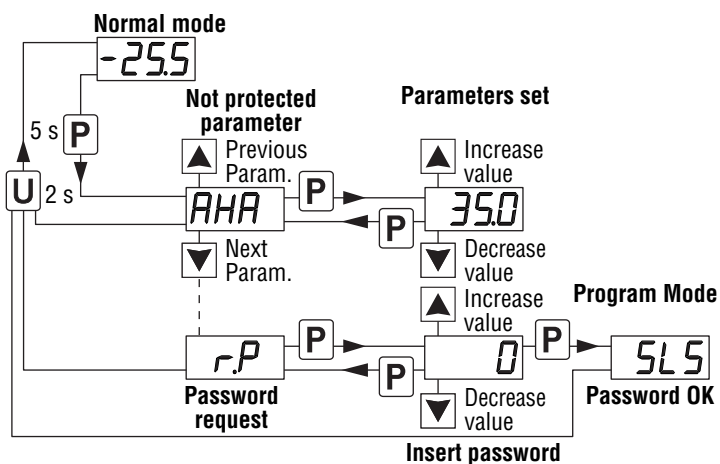

2.5 Reset parameters to default value

The instrument allows the reset of the parameters to values programmed in factory as default

To restore the default parameters value set value -48 at ℓ^{PP} password request. Therefore, to make the reset to the default parameters, enable the Password using the ℓ^{PP} parameter so that the ℓ^{PP} setting is requested, at this point insert -48 instead of the programmed access password.

Once confirmed the password with the **[P]** key the display shows “---” for 2 s therefore the instrument resets all the parameters to factory default setting.

2.6 Keyboard lock function

On the instrument it is possible to completely lock the keyboard.

This function is useful when the controller is in an accessible area and the changes must be avoided.

To activate the keyboard lock it is enough program the parameter $\ell^{L\Delta}$ to a value different from oF .

The $\ell^{L\Delta}$ value is the keys inactivity time after which the keyboard will be automatically locked.

Therefore, pressing no buttons for the time set at $\ell^{L\Delta}$, the instrument automatically disable the normal functions of the keys.

When the keyboard is locked, if any of the key is pressed, the display shows $\ell^{L\Delta}$ to indicate that the lock is active.

To unlock the keyboard it is enough to contemporarily push **[P]** + **[▲]** keys and keep them pushed for 5 s, after which the label $\ell^{L\Delta}$ appears on the display and all the key functions will be available again.

3. USAGE WARNINGS

3.1 Admitted use



The instrument has been projected and manufactured as a measuring and control device to be used according to EN60730-1 at altitudes operation below 2000 m.

Using the instrument for applications not expressly permitted by the above mentioned rule must adopt all the necessary protective measures.

The instrument **MUST NOT BE USED** in dangerous environments (flammable or explosive) without adequate protections. The instrument used with NTC 103AT11 probe (identifiable by the printed code "103AT-11" visible on the sensor part) is compliant with standard EN 13485 ("Thermometers for measuring the air and product temperature for the transport, storage and distribution of chilled, frozen, deep-frozen/quick-frozen food and ice cream") with the following classification: [EN13485 air, S, A, 2, -50°C +90°C]

Remember that the end user must periodically check and verify the thermometers in compliance with standard EN 13486.



The installer must ensure that the EMC rules are respected, also after the instrument installation, if necessary using proper filters.

4. INSTALLATION WARNINGS


4.1 Mechanical mounting

The instrument, in case 78 x 35 mm, is designed for flush-in panel mounting. Make a 71 x 29 mm hole and insert the instrument, fixing it with the provided special brackets.


Avoid placing the instrument in environments with very high humidity levels or dirt that may create condensation or introduction of conductive substances into the instrument. Ensure adequate ventilation to the instrument and avoid installation in containers that house devices which may overheat or which may cause the instrument to function at a higher temperature than the one permitted and declared. Connect the instrument as far away as possible from sources of electromagnetic disturbances such as motors, power relays, relays, solenoid valves, etc..

4.2 Dimensions [mm]


4.2.1 Mechanical dimensions

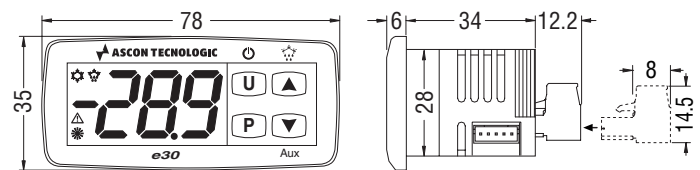

4.2.2 Panel cut-out

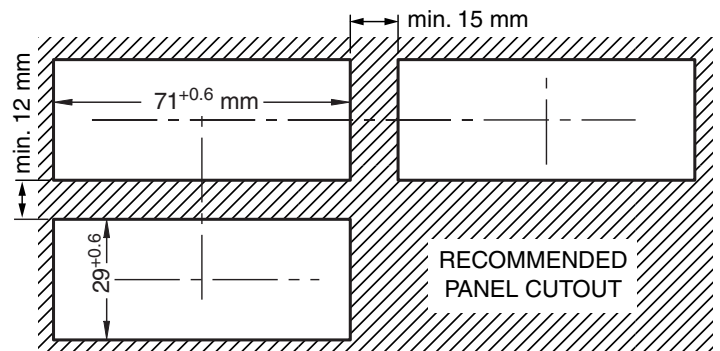

4.3 Mounting

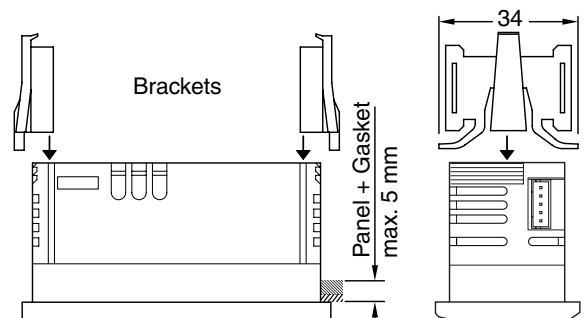


4.4 Electrical connections


Carry out the electrical wiring by connecting only one wire to each terminal, according to the following diagram, checking that the power supply is the same as that indicated on the instrument and that the load current absorption is no higher than the maximum electricity current permitted.

As the instrument is built-in equipment with permanent connection inside housing, it is not equipped with either switches or internal devices to protect against current overloads: the installation will include an overload protection and a two-phase circuit-breaker, placed as near as possible to the instrument and located in a position that can easily be reached by the user and marked as instrument disconnecting device which interrupts the power supply to the equipment

It is also recommended that the supply of all the electrical circuits connected to the instrument must be protect properly, using devices (ex. fuses) proportionate to the circulating currents. It is strongly recommended that cables with proper insulation, according to the working voltages and temperatures, be used. Furthermore, the input cable of the probe has to be kept separate from line voltage wiring. If the input cable of the probe is screened, it has to be connected to the ground at only one side.

 We recommend that a check should be made that the parameters are those desired and that the application functions correctly **before connecting the outputs to the actuators** so as to avoid malfunctioning that may cause irregularities in the plant that could cause damage to people, things or animals.

4.4.1 Electrical wiring diagram

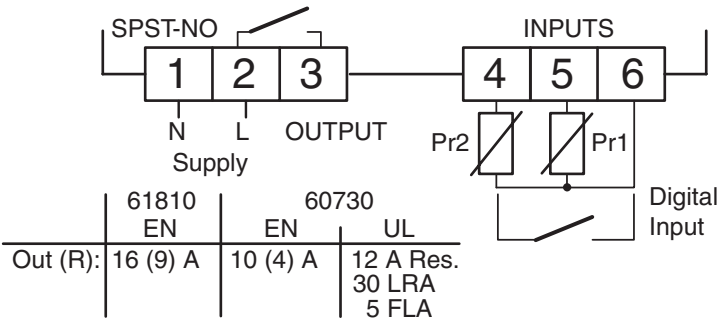

5. FUNCTIONS

5.1 ON/Stand-by function

Once powered the instrument can assume 2 different conditions:

- ON:** Means that the controller uses the control functions.
- STAND-BY:** Means that the controller uses no control function and the display is turned off except for the Stand-by LED.

The transition between Standby and ON is equivalent to power ON the instrument providing the electrical power. In case of power failure, the system always sets itself in the condition it was in before the black-out

The ON/Stand-by function can be selected:

- With the key /ON pressed for 1 s if $ELUF = 3$;
- With the key /AUX pressed for 1 s if $ELFb = 3$;
- Using the Digital Input if parameter $IF = 7$.

5.2 Normal and Economic operation

This tool allows to pre-set two different Setpoints, one **Normal** - SP and one **Economic** - SPE .

Associated with each Setpoint there is the relative differential (hysteresis): **Normal** - rd and **Economic** - red .

Switching between the two modes can be **automatic** or **manual**.

5.2.1 Normal/Economic operation selection

This function can be used when you need to switch two functional temperatures (eg. Day/Night or week-day/week-end). The Normal/Economic operation can be selected in manual mode:

- Using the /ON key if parameter $ELUF = 2$;
- Using the /AUX key if parameter $ELFb = 2$;
- Using the Digital Input if parameter $IF = 6$.

The Normal/Economic operation can be selected in automatic mode:

- Elapsed the ELt time after the door has been closed (Normal/Eco switching).
- At door opening if the SPE Setpoint is activated by ELt parameter (Eco/Normal switching).
- Elapsed the ELt time after the door has been closed and from the activation of SPE Setpoint by ELt parameter (Eco/Normal switching).


To use this function, it is necessary to set the Digital Input as: $IF = 1, 2$ or 3 .

If $ELt = OF$ the selection of Eco/Normal modes via the digital input is disabled.

If $ELt = OF$ the time-out switching from Eco to Normal mode is disabled.

Switching to Economic mode is indicated by the label Eco . When $rdS = Ec$ the Economic mode is pointed out with a fixed Eco label otherwise the label Eco appears every 10 s alternated to the display set with parameter rdS .

The normal Set Point **SP** can be set to a value between the one set with parameter $SL5$ and the one set with parameter $SH5$ while the Economic Set Point **SPE** can be set to a value between the one set with parameter SP and the one set with parameter $SH5$.

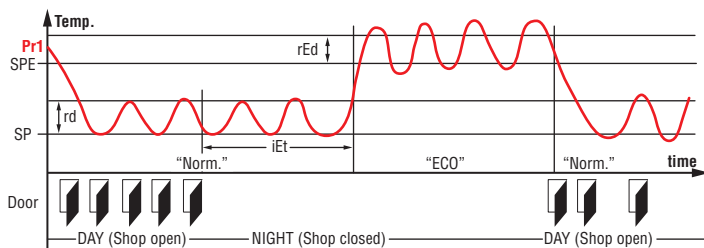

Note: In the following examples the Set point is generally indicated as **SP** and the differential as **rd** however the instrument will act according to the Set Point and the differential selected as active.

5.3 Measure and display configuration

With the **uP** it is possible to select the temperature engineering unit and the desired measure resolution (**C0** = °C/1°; **C1** = °C/0.1°; **F0** = °F/1°; **F1** = °F/0.1°).

The instrument allows the measure calibration, which can be used to recalibrate the instrument according to application needs. The calibration is made by using parameters **iC1** (input **Pr1**) and **iC2** (**Pr2** input).

Parameter **iP2** allows to select the instrument usage of **Pr2** measure as:

Au Auxiliary probe;

DG Digital Input (see the Digital input functions).

If **Pr2** input is not used, set **iP2** = **oF**.

Using **iFt** parameter can be set a software filter for the measuring the input values in order to decrease the sensibility to rapid temperature changes (increasing the sampling time). Through the **iS5** parameter is possible to set the variable normally displayed:

P1: **Pr1** probe measurement;

P2: **Pr2** probe measurement;

SP: Active Set Point;

EC: Probe measure if the instrument is in Normal Mode, the label **Eco** if the instrument is in (**Eco mode**);

OFF: If the numerical display must be switched off (**oF**).

When is displayed one of the measures **iS5** = **P1/P2/EC** the **iCU** parameter allows to set an offset that is to be applied only to the displayed variable (all controls will always happen according to the correct temperature value, changed only by the calibration parameters).

Regardless of what is set at **iS5** parameter, all the measurement variables can be shown pressing the **u** key.

The display alternately shows the code that identifies the variable (see below) and its value. The variables are:

Pr1 Probe 1 measurement;

Pr2 Probe 2 measurement (on/off if **Pr2** is a Digital input);

Lt Minimum stored **Pr1** temperature;

Ht Maximum stored **Pr1** temperature.

The peak (min./max.) temperature values of **Pr1** probe are not stored in case of power failure and can be reset pressing the **▼** for 3 s elapsed which, the display shows " - - - " for an instant to indicate that the min./max. values have been erased and the new peak is the temperature read in that moment. The system exits the variable display mode after 15 s from the last **u** key pressure.

It is also noted that the **Pr1** probe display can also be changed by defrost display function via the **ddL** parameter (see the Defrost function).


5.4 Digital input configuration

The digital input function is defined using the **iF** parameter and the action is delayed for the time programmed with parameter **iEt**. The **iF** parameter can be configured for the following functions:

- 0 Digital input not active;
 - 1 Cell door opening with NO contact: at input closure (and after the **iEt**) the instrument displays alternately **oP** and the variable set at **iS5** parameter. With this mode of operation of the digital input activates also the time set with parameter **RdR** elapsed which the alarm is activated to warn that the door has been left open. In addition, at door opening, the instrument returns to normal operation if it was in Eco mode and the Eco mode activation was enabled through parameter **iEt**;
 - 2 Similar to **iF** = 1;
 - 3 Cell door opening with output lock and NO contact: similar to **iF** = 1 but with output lock. At alarm door open intervention **RdR** also the output is re-activated;
 - 4 External alarm signal with NO contact: at input closing (and after the **iEt** time) the alarm is activated and the instrument alternately shows on the display: **RL** and the variable set with parameter **iS5**;
 - 5 External alarm signal with Control output disabled and NO contact: at input closing (and after the **iEt** time) the control output is disabled, the alarm is activated and the instrument shows on the display alternately **RL** and the variable set with parameter **iS5**;
 - 6 Normal/Economic mode selection with NO contact: at input closing (and after the **iEt** time) the instrument switches to Economic operation mode. Opening the digital input, the instrument returns in Normal operation mode;
 - 7 Instrument On/Off (stand-by) selection with NO contact: at input closing (and after the **iEt** time) the instrument is switched ON while it is placed in Stand-by mode when the digital input is open;
 - 8 Do not use;
 - 9 Defrost activation command with NO contact: at input closing (and after the **iEt** time) the instrument starts a defrost cycle;
 - 10 End-Defrost command with NO contact: at input closing (and after the **iEt** time), if the defrost cycle is in progress the instrument stops it, otherwise inhibits the defrost start;
- 1... -10 - Features identical to the above but obtained through a NC contact and a reversed logic operation.

5.5 Temperature control

The instrument control is **ON/OFF** and acts on the output depending on the **PR1** probe measuring, the Set Point **SP** (or **SPE**), the Hysteresis **rd** (or **rEd**) and the function mode **rHE**. Through the **rHE** parameter it is possible to obtain the following operations: Refrigeration control (**rHE** = **C**) or Heating control (**rHE** = **H**).

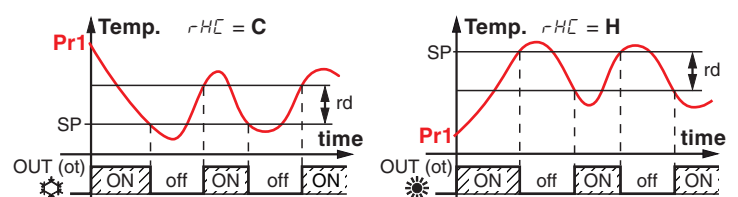

Depending on the function mode programmed with parameter **rHE** the differential is automatically considered by the controller with positive values for a **Refrigeration** control (**rHE** = **C**)

or negative values for a **Heating** control ($rHE = H$).

In the event of a probe error, it is possible to set the instrument so that the output continues to work in cycles according to the times programmed with parameter $rE1$ (activation time) and $rE2$ (deactivation time).

If an error occurs on the probe the instrument activates the output for the time $rE1$, then deactivates it for the time $rE2$ and so on whilst the error remains.

Programming $rE1 = \text{OFF}$ the output in probe error condition remains switched off.

Programming instead $rE1$ to any value and $rE2 = \text{OFF}$ the output in probe error condition remains switched ON.


Remember that the temperature regulation function can be conditioned by the *Compressor Protections*, *Delay at power ON* and *Defrost functions*.

5.6 Compressor protection function and power-on delay


The "**Compressor Protection**" function aims to avoid repeated compressor start-ups controlled by the instrument in cooling applications or otherwise can be used to add a timed control on the actuator control output

This function foresees 3 time controls on the switching ON of the output associated with the temperature control request. The protection consists of preventing the output being switched ON during the times set with parameters $PP1$, $PP2$ and $PP3$ and therefore that any activation occurs only after all times are elapsed.


- 1 First control (parameter $PP1$) foresees a delay to output activation (switching-ON delay).

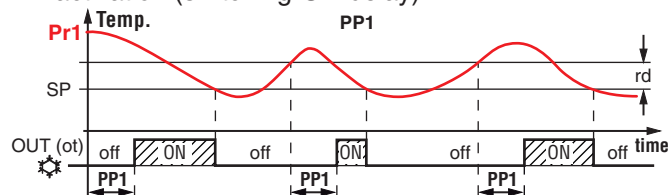

- 2 Second control (parameter $PP2$) foresees an inhibition to the activation of the output by a time delay that starts when the output is turning OFF (delay after switching-OFF).

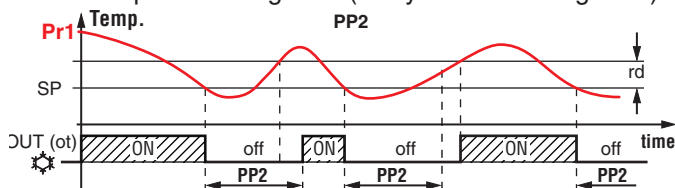

- 3 Third control (parameter $PP3$) foresees an inhibition to the activation of the output by a time delay that starts when the output was turned ON last time (delay between two switching-ON).

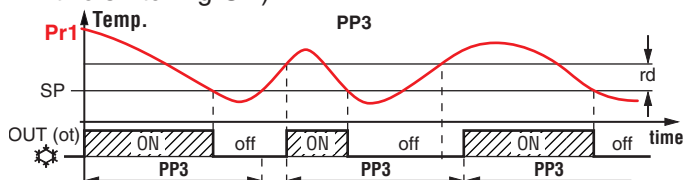

During the output inhibition the LED **OUT** (Cool ❄ or Heat ☀) blinks. It is also possible to prevent activation of the output after the instrument is turned ON, for the time set in the parameter P_{od} .

During the power ON delay phase, the display shows the indication **od**, alternated with the normal visualization.

All these functions are disabled if the relative parameters are set to **OFF** (OFF).

5.7 Defrost control

The automatic defrost control is made with the *stopping compressor* method; it occurs by interval times or after a certain time of continuous compressor functioning.

The automatic defrost function is activated when at parameter $dd1$ is set the defrost interval time between 2 defrost cycles.

The first defrost after power on can be set by parameter $d5d$.

This allows to perform the first defrost to a different interval from $dd1$ time.

When the instrument must perform a defrost cycle at all power ON, set parameter $d5d = \text{OFF}$.

If all defrost cycles must be performed after the same interval time, program $d5d = dd1$.

Automatic defrost function is totally disabled when $dd1 = \text{OFF}$ (included the first, regardless of the time set at $d5d$ parameter).

The instrument provides to switch OFF the output for the ddE period of time every time expires the $dd1$ time (or $d5d$ in case of first defrost after power ON).

Moreover, the instrument starts a defrost cycle when the compressor is activated continuously for the time dcd .

This function is used as the continuous operation of the compressor for a long period is often and normally a symptom of low heat exchange typically caused by the frost on the evaporator. By setting $dcd = \text{OFF}$ the function is disabled.

5.7.1 Manual defrost

To start a manual defrosting cycle, press the key Δ/\star when it is not in programming mode and keep it pressed for about 5 s after which, if the conditions are correct, the LED \star will light up and the instrument performs out a defrosting cycle.

To stop a defrosting cycle, press the key Δ/\star during the defrost and keep it pressed for about 5 seconds.

5.7.2 Display lock during Defrosting

Through parameters ddL and RdR it is possible to define the display behaviour during defrost:

$ddL = \text{on}$

The ddL parameter locks the display at the last temperature reading during all the defrost cycle until, at the end of defrost, the temperature has not reached the lock value or the value $[SP + rd]$ or is elapsed the time set at parameter RdR .

$ddL = \text{Lb}$

Shows the label dEF during the defrost cycle and PdF after the defrost until, at the end of defrost, the temperature has not reached the lock value or the value $[SP + rd]$ or is elapsed the time set on parameter RdR .

$ddL = \text{OFF}$

The display continues showing the temperature measured by the $Pr1$ probe during the defrost cycle.

5.8 Alarm functions

The alarm conditions of the instrument are:

- Probe errors $E1$, $-E1$ and $E2$, $-E2$;
- Temperature alarms $H1$ and $L1$;
- External alarm AL ;
- Door open oP .

All active alarms are pointed out on the instrument display lighting up the LED Δ .

Any active alarm condition is signaled lighting up the LED Δ , while the acknowledged alarm status is shown by flashing the LED Δ .

5.8.1 Temperature alarms

The temperature alarm works according to **Pr1** or **AU** probes measurement, the type of alarm set in the parameter ARY the alarm thresholds set in parameters AHA (maximum alarm) and ALA (minimum alarm) and the relative differential AAd .

Through parameter ARY it is possible to set the alarm thresholds AHA and ALA as absolute or relative to the active Set Point, must be related to **Pr1** or **Au** probes and if the message $H1$ (High alarm) and $L1$ (Low Alarm) are to be displayed at alarm intervention.


Depending on the desired alarm operating mode, parameter ARY can be set as:

- 1 Absolute alarms referred to probe **Pr1**, displays $H1/L1$;
- 2 Relative Alarms referred to probe **Pr1**, displays $H1/L1$;
- 3 Absolute alarms referred to probe **Au**, displays $H1/L1$;
- 4 Relative Alarms referred to probe **Au**, displays $H1/L1$;
- 5 Absolute alarm referred to probe **Pr1**, displays no labels;
- 6 Relative alarm referred to probe **Pr1**, displays no labels;
- 7 Absolute alarm referred to probe **Au**, displays no labels;
- 8 Relative alarm referred to probe **Au**, displays no labels.


Using some parameters it is also possible to delay the enabling and the intervention of these alarms.

These parameters are:

- APR Temperature alarm exclusion time on switching ON the instrument if the instrument is in alarm status when it is switched ON. If the instrument is not in alarm status when it is switched on the time APR it is not considered.
- AdR Temperature alarm exclusion time at the end of defrost cycle (and, if programmed, after the draining) or after a continuous cycle.
- ARL Temperature alarms delay activation time. Temperature alarms are enabled at the end of the exclusion times and are activated after the ARL time when the temperature measured by the probe exceeds or goes below the respective maximum and minimum alarm thresholds. The alarm thresholds are those set at parameters AHA and ALA when the alarms are set as absolute ($ARY = 1, 3, 5, 7$).

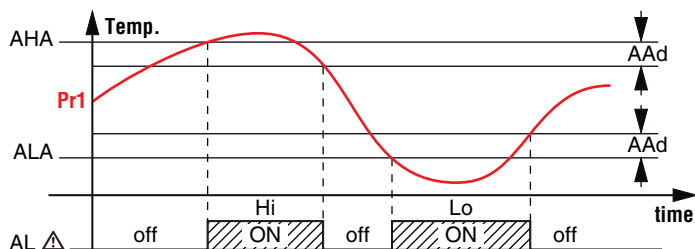

or they assume the values $[SP + AHA]$ and $[SP + ALA]$ if the alarms are relative ($ARY = 2$ and 6).

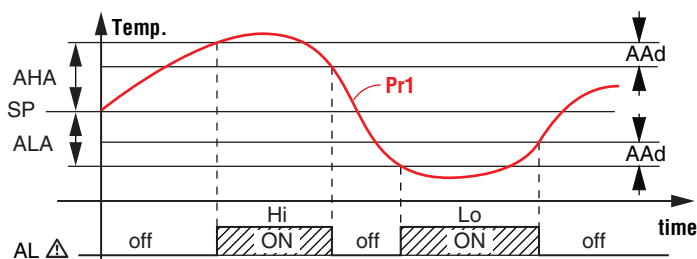

The maximum and minimum temperature alarms can be disabled by setting the related parameters AHA and $ALA = oF$.

The temperature alarms are signalled lighting up the alarm LED (Δ).

5.8.2 External alarm from digital input

The instrument can signal an alarm external to the instrument using the digital input setting $iF1 = 4$ or 5 . The instrument signals the alarm turning ON the alarm LED (Δ) and displaying AL label alternated to the variable set with parameter $Id5$. Mode $iF1 = 4$ operates no action on the control output, while $iF1 = 5$ deactivates the control output at digital input intervention.

5.8.3 Open door alarm

The instrument can signal the open door alarm condition using the digital input setting $iF1 = 1, 2$ and 3 . As the Digital input is activated, the instrument signals that the door is open showing on the display the **oP** label alternated to the variable set with parameter $Id5$.

After the delay set with parameter APR the instrument signals the Open Door alarm lighting up the LED Δ while showing the label **oP**. At the open door alarm intervention are also re-activated the inhibited outputs (compressor).

5.9 Function of keys $\square U / \square$ and $\square \nabla / \square$ /Aux

Two of the instrument keys, in addition to their normal functions, can be configured to operate other commands.

The $\square U / \square$ key function can be defined using the $ELUF$ parameter while the $\square \nabla / \square$ key via parameter $ELFb$.

Both parameters have the same possibilities and can be configured to perform the following functions:

oF The key carries out no function;

- 1 Do not use;
- 2 Pressing the key for at least 1 s, you can sequentially select a **normal** or **eco** operating mode (SP/SPE). A selection has been made the display shows for about 1 s the active set point code (SP or SPE);
- 3 Pressing the key for at least 1 s is possible to switch the instrument from **ON** to **Stand-by** state and vice-versa;
- 4 Do not use.

6. ACCESORIES


6.1 Parameters configuration by A01

The instrument is equipped with a connector that allows the transfer from and toward the instrument of the functioning parameters through the device A01 with 5 poles connector.



This device it is mainly usable for the serial programming of some instruments which need to have the same parameters configuration or to keep a copy of the parameters setting of an instrument and allow its rapid retransmission.

The same device allows to connect a PC via USB with which, through the appropriate configuration software for “AT UniversalConf” tools, the operating parameters can be configured. To use the **A01** device with the **e30** instrument, the A01 must be correctly supplied.

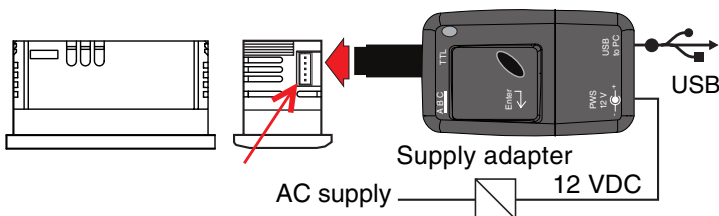

For additional info, please have a look at the “A01 instruction manual”.

6.2 Parameters configuration by AFC1


The **AFC1** is a contactless NFC (Near Field Communications) connection device that allows to **Upload/Daownload** the operating parameters **From/To** the instruments.

The **AFC1** is powered directly by the **USB** port through which is connected to a **PC**.



When the instrument is equipped with the **NFC** communication option, the parameter configuration performed with the “AT UniversalConf” program (see previous paragraph) can be transferred to the instrument also through the **AFC1** device.

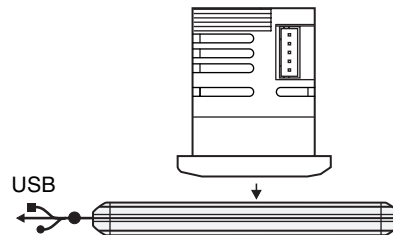

To load the operating parameters in the instrument using the **AFC1** device, place the instrument on the **AFC1** with the display facing the **NFC** symbol (⌡), then send the parameters to the instrument's memory.



7. PROGRAMMABLE PARAMETERS TABLE

Here below is a description of all the parameters available on the instrument. Some of them may not be present, either due to the fact they depend on the type of instrument or because they are automatically disabled as unnecessary.

Param.	Description	Range	Def.	Note
1 <i>SL5</i>	Minimum Set Point	-99.9... HS	-50.0	
2 <i>SH5</i>	Maximum Set Point	LS... 999	99.9	
3 <i>SP</i>	Set Point	LS... HS	0.0	
4 <i>SPE</i>	Set Point Eco	SP ÷ SHS	0.0	
5 <i>uP</i>	Unit of measurement and resolution (decimal point)	C0 °C, resolution 1°; F0 °F, resolution 1°; C1 °C, resolution 0.1°; F1 °F, resolution 0.1°.	C1	
6 <i>IFL</i>	Measurement filter	oF ÷ 20.0 s	2.0	
7 <i>iC1</i>	Pr1 Probe Calibration	-30.0 ÷ +30.0°C/°F	0.0	
8 <i>iC2</i>	Pr2 Probe Calibration	-30.0 ÷ +30.0°C/°F	0.0	
9 <i>iCU</i>	Display offset	-30.0 ÷ +30.0°C/°F	0.0	
10 <i>iP2</i>	Input Pr2 usage	oF Unused; EP Do not use; Au Auxiliary probe; dG Digital Input.	dG	
11 <i>iF1</i>	Function and logic functioning of the Digital Input (adding the "-" minus sign the logic is inverted)	0 No function; 1, 2 Open Door; 3 Open Door with Output Lock; 4 External Alarm; 5 Ext. Alarm with Output disabling; 6 Select Normal/Eco Set Point; 7 On/Stand-by select; 8 Do not use; 9 Defrost cycle start; 10 Defrost cycle end.	0	
12 <i>iL1</i>	Digital Input Delay	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
13 <i>iEL</i>	Eco Mode activation delay at Door closed	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	oF	
14 <i>iEL</i>	Max. time functioning in Eco Mode	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	oF	
15 <i>iDS</i>	Variable normally displayed	P1 Probe Pr1 measure; P2 Probe Pr2 measure; P3 Do not use; Ec Pr1 measure in Normal mode + <i>ECO</i> label when in Eco mode; SP Set Point; oF Display not lit.	P1	
16 <i>r-d</i>	Differential (Hysteresis)	0.0 ÷ 30.0°C/°F	2.0	
17 <i>rEd</i>	Differential (Hysteresis) in ECO mode	0.0 ÷ 30.0°C/°F	2.0	
18 <i>rL1</i>	Output activation time for Pr1 probe error	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
19 <i>rL2</i>	Output deactivation time for Pr1 probe error	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
20 <i>rHL</i>	Output operating mode	H Heating; C Cooling; nr Do not use; HC Do not use; C3 Do not use.	C	
21 <i>ddL</i>	Display Lock during defrost	oF Not active; on Active at last measure; Lb Active with label (<i>dEF</i> during defrost and <i>PdF</i> at defrost).	oF	
22 <i>dc-d</i>	Defrost activation time for continuous compressor operating	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	oF	
23 <i>ddE</i>	Defrost duration	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
24 <i>dd1</i>	Defrosting interval	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	oF	
25 <i>d5d</i>	Delay first defrost after power-ON	oF Defrost at power-ON; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	oF	
26 <i>PP1</i>	Out delay at switching-ON	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
27 <i>PP2</i>	Out delay after switching OFF	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
28 <i>PP3</i>	Delay between two output switching-ON	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	

Param.	Description	Range	Def.	Note
29 <i>Pod</i>	Output delay at power ON	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
30 <i>RAY</i>	Temperature Alarm 1 type	1 Absolute for Pr1 with Hi-Lo label; 2 Relative to Pr1 with Hi-Lo label; 3 Absolute for Au with Hi-Lo label; 4 Relative to Au with Hi-Lo label; 5 Absolute for Pr1; 6 Relative to Pr1; 7 Absolute for Au; 8 Relative to Au.	1	
31 <i>RAH</i>	High temperature Alarm threshold	oF Disabled; -99.9 ÷ +999°C/°F.	oF	
32 <i>RLR</i>	Low temperature Alarm threshold	oF Disabled; -99.9 ÷ +999°C/°F	oF	
33 <i>RRd</i>	Temperature Alarms Differential	0.0 ÷ 30.0°C/°F	1.0	
34 <i>RAE</i>	Temperature Alarms Delay	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	oF	
35 <i>APA</i>	Temperature Alarms delay at power ON	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	2.00	
36 <i>RdR</i>	Temperature Alarms delay and unlock display delay after defrost	oF Disabled; -1 ÷ -59 (min) ÷ 1 ÷ 99 (h).	1.00	
37 <i>ROA</i>	Open Door Alarm Delay	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 99 (min).	3.00	
38 <i>UF</i>	 Key Function	oF No function; 1 Do not use; 2 ECO Mode selection;	oF	
39 <i>Fb</i>	 /Aux Key Function	3 Switch ON/Switch OFF (Stand-by); 4 Do not use.	oF	
40 <i>Lo</i>	Keyboard lock function delay	oF Disabled; -1 ÷ -59 (s) ÷ 1 ÷ 30 (min).	oF	
41 <i>Ed</i>	Set Point visibility with  key fast procedure	0 None; 1 SP; 2 SPE; 3 SP and SPE; 4 Active SP; 5, 6 Do not use.	1	
42 <i>PP</i>	Password to Access Parameter functions	oF Disabled; 001 ÷ 999.	oF	

8. PROBLEMS AND MAINTENANCE

8.1 Notifications

8.1.1 Error messages

Error	Reason	Action
$E1 - E1$ $E2 - E2$	The probe may be interrupted (E) or in short circuit (-E) or may measure a value outside the range allowed	Check the probe connection with the instrument and check that the probe works correctly
EP_r	Internal EEPROM memory error	Press P key
E_{rr}	Fatal memory error	Replace the instrument or ship to factory for repair


8.1.2 Other messages

Message	Reason
od	Delay at power-on in progress
L_n	Keyboard locked
H_i	Maximum temperature alarm in progress
L_o	Minimum temperature alarm in progress
RL	Digital Input alarm in progress
oP	Door Open
dEF	Defrost in progress with $ddl = Lb$
PdF	Post-defrosting in progress with $ddl = Lb$
Eco	Eco Mode in progress

8.2 Cleaning

We recommend cleaning of the instrument only with a slightly wet cloth using water and not abrasive cleaners or solvents.

8.3 Disposal

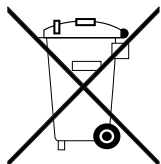

The appliance (or the product) must be disposed of separately in compliance with the local standards in force on waste disposal.

9. WARRANTY AND REPAIRS

The instrument is under warranty against manufacturing flaws or faulty material, that are found within 18 months from delivery date. The warranty is limited to repairs or to the replacement of the instrument.

The eventual opening of the housing, the violation of the instrument or the improper use and installation of the product will bring about the immediate withdrawal of the warranty effects.

In the event of a faulty instrument, either within the period of warranty, or further to its expiry, please contact our sales department to obtain authorisation for sending the instrument to our company.

The faulty product must be shipped to Ascon Tecnologic with a detailed description of the faults found, without any fees or charge for Ascon Tecnologic, except in the event of alternative agreements.

10. TECHNICAL DATA

10.1 Electrical characteristics

Power supply: 230 VAC, 115 VAC $\pm 10\%$;

AC frequency: 50/60 Hz;

Power consumption: about 2 VA;

Inputs: 2 inputs for temperature probes:

NTC (103AT-2, 10 k Ω @ 25°C);

1 free of voltage digital input as an alternative to input **Pr2**;

Output: 1 relay output SPST-NO:

	EN 61810	EN 60730	UL 60730
Out1 (R) - SPST-NO - 16A - 1HP 250V, 1/2HP 125 VAC	16 (9) A	10 (4) A	12 A Res., 30 LRA, 5 FLA

12 A max. for those with removable terminal model;

Relay output Electrical life: 100000 operations;

Action type: Type 1.B (EN 60730-1);

Overvoltage category: II;

Protection class: Class II;

Isolation: Reinforced insulation between the low voltage parts (type C or D power supply and relay output) and front panel; Reinforced insulation between the low voltage parts (type C or D power supply and relay output) and the extra low voltage section (inputs).

10.2 Mechanical characteristics

Housing: Self-extinguishing plastic, UL 94 V0;

Ball Pressure Test as described in EN60730: accessible parts 75°C; support live parts 125°C;

Heat and fire resistance category: D;

Dimensions: 78 x 35 mm, depth 34 mm;

Weight: about 105 g;

Mounting: Incorporated flush in panel (gasket +panel max. 2.5 mm) in a 71 x 29 mm hole;

Connections:

Inputs: fixed or removable screw terminal block for 0.14 \div 1.5 mm²/AWG 28 \div 16 cables;

Power supply and Outputs: fixed or removable screw terminal block for 0.2 \div 2.5 mm²/AWG 24 \div 14 cables;

Protection degree: IP54;

Pollution degree: 2;

Operating temperature: 0 \div 50°C;


Operating humidity: < 95 RH% with no condensation;

Storage temperature: -25 \div +60°C.

10.3 Functional features

Temperature Control: ON/OFF mode;
Defrost control: Interval cycles by stopping compressor;
Measurement range: NTC: -50 ÷ +109°C/-58 ÷ +228°F;
Display resolution: 1° or 0.1° (range -99.9 ÷ +99.9°);
Overall accuracy: ±(0.5% fs + 1 digit);
Sampling rate: 130 ms;
Display: 3 Digit Red (Blue optional), height 17.7 mm;
Software class and structure: Class A;
Compliance: Directive 2004/108/CE (EN55022: class B;
EN61000-4-2: 8kV air, 4kV cont.; EN61000-4-3: 10V/m;
EN61000-4-4: 2kV supply and relay outputs, 1kV inputs;
EN61000-4-5: supply 2kV com. mode, 1 kV\diff. mode;
EN61000-4-6: 3V),
Directive 2006/95/CE (EN 60730-1, EN 60730-2-9),
Control 37/2005/CE (EN13485 air, S, A, 2, -50°C +90°C with
probe NTC 103AT11).

11. HOW TO ORDER

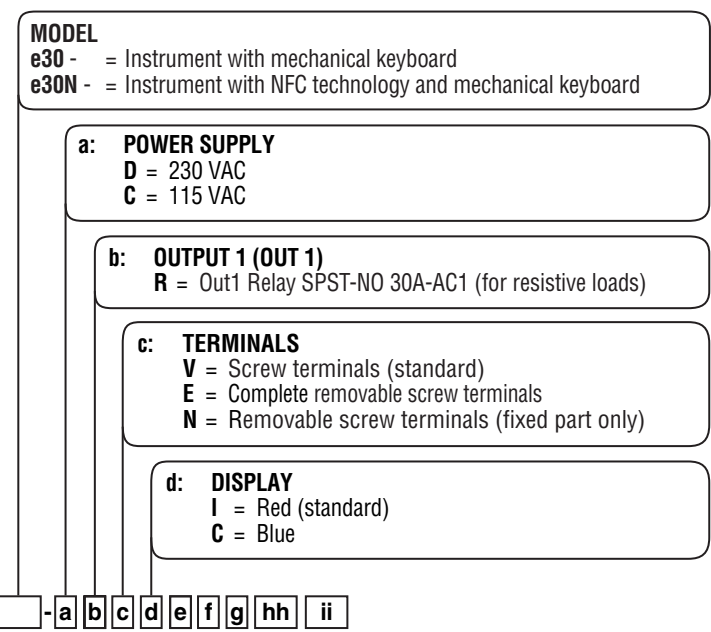

e, f, g: RESERVED CODES; hh, ii: SPECIAL CODES