

Ascon Technologic S.r.l.
via Indipendenza 56,
27029 - Vigevano (PV), Italia
Tel.: +39 0381 69871,
Fax: +39 0381 698730
www.ascontecnologic.com

E

mod. IO-CB/DM-08TS-00M.U. IO-CB/DM-08TS-2/07.07
Cod. J30-658-1ADM-08TS E**User manual****Contents**

- Characteristics
- Functional Block Diagram
- PDOs used by the module
- Hardware Set-up
- Parameter configuration
- Commands
- Emergency messages
- Parameter Store/Restore
- Object Dictionary

CANopen I/O module

8 Digital Programmable Input/Output

mod. IO-CB/DM-08TS



Each of the I/O terminals can be programmed as either Input or Output.

Two of the inputs can perform:

- pulse counting;
- pulse frequency measurements;
- pulse width measurements.

Two of the outputs can perform:

- PWM output;
- Single pulse output.

WARNING

- 1) The product described in this manual should only be installed, operated and maintained by qualified application programmers and software engineers who are familiar with automation safety concepts and applicable national standards.
- 2) This product supports the Parameter defaults indicated by CiA standards, in addition, some parameters have a factory set (value present in the module when comes from the factory). The default values can be loaded with the restore command, but after the restore, factory set values are lost.

APPLICABLE STANDARDS

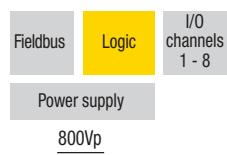
The DM-08TS module is suited for the CiA DS301 protocol [1] and implements the CiA DS401 standard Device Profile [2].

Characteristics**Technical data**

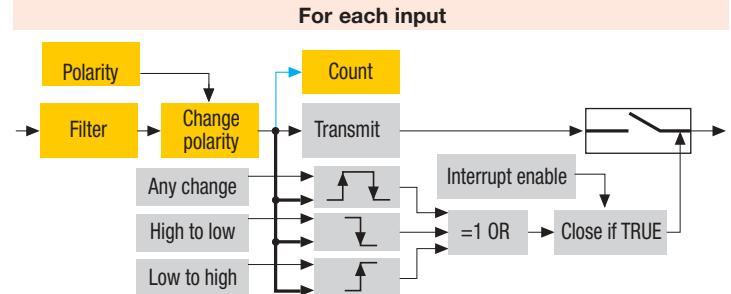
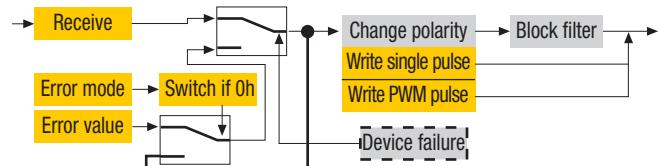
Input	Output
No. of channels	8 (Input + Output channels)
No. of counters	2 (16 bit)
Polarity (EN 61131-2 type 2)	Sink (PNP)
UL (state 0)	-3...+11.5 Vdc
UT (transition)	5...11 Vdc
UH (state 1)	11...30 Vdc
Input impedance	5 kΩ
ON/OFF delay	5 ms
Max. counter frequency	20 kHz
Min. pulse width	25 µs
No. of PWM Output	2
Polarity (high side)	Source (PNP)
Output voltage	24 Vdc
Output current	0.5 A
Output current total	4A (continuous)
ON/OFF delay	<5 ms
PWM Period	min.: 256 µs max.: 65 s
PWM Duty Cycle	0.0...100.0%
Output Single	min.: 5 ms max.: 65535 ms
Pulse width	

General

3 way isolation	800 Vp
Power supply	24 Vdc; -15...+25%
Power consution	3.5 W
Oversoltage protection	40 Vdc
Dimensions	L: 76; H: 110; W: 65
Weight	220 g
Safety regulations	Isolation class II (50Vrms), EN61010-1
	Installation cathegory II, Pollution degree 2
CE marking	EN61131-2

3 way isolation diagram**Environment**

	Operating	Storage
Temperature	-10...+65°C	-40...+85°C
Relative Humidity	5...95% non condensing Appropriate measures must be taken against humidity >85%	5...95% non condensing For a short period, slight condensation may appear on the housing
Mounting	Vertical, free air	
Protection	IP20	
Vibrations (3 axes)	10...55Hz 0.0375mm 57...150Hz 0.5g	
Shock (3 axes)	15g, 11ms half sine	

Functional Block Diagram**For each output****PDOs used by the module**

TPDO used by the module when the terminals are set as input channels

TPDO	Properties	Mapped objects	Index	Sub-index
TPDO 1	COBID: 180h + NodeID Transmission Type: 01h *	Read Digital input Read Input Latch Read Input Wait	6000h 2011h 2012h	01h 01h 01h
TPDO 2	COBID: 280h + NodeID Transmission Type: 01h *	Input Frequency Value (ch 1) Input Frequency Value (ch 2)	2006h 2006h	01h 02h
TPDO 3	COBID: 380h + NodeID Transmission Type: 01h *	Input count Value (ch 1) Input count Value (ch 2)	2007h 2007h	01h 02h

Note: * The Transmission Type is configurable: **01h** is the factory set (value present in the modules when come from the factory); **FFh** is the default value

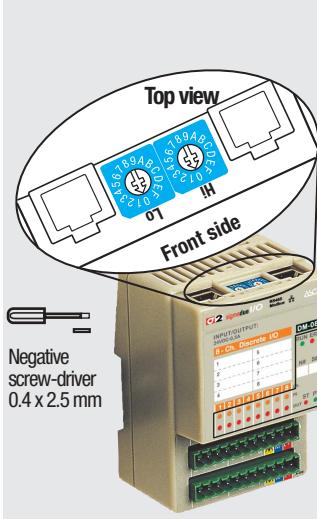
RPDO used by the module when the terminals are set as output channels

RPDO	Properties	Mapped objects	Index	Sub-index
RPDO 1	COBID: 200h+ NodeID Transmission Type: 01h *	Write Digital output	6200h	01h
RPDO 2	COBID: 300h+ NodeID Transmission Type: 01h *	Output pwm Value (ch 3) Output pwm Value (ch 4)	200Ah 200Ah	01h 02h
RPDO 3	COBID: 400h+ NodeID Transmission Type: 01h *	Output pulse Value (ch 3) Output pulse Value (ch 4)	200Bh 200Bh	01h 02h
RPDO 4	COBID: 500h+ NodeID Transmission Type: 01h *	Start Stop	200Dh	00h

Note: * The Transmission Type is configurable: **01h** is the factory set (value present in the modules when come from the factory); **FFh** is the default value

Hardware Set-up

Hexadecimal rotary switches, service and I/O LEDs



	Service LEDs	Status	Meaning
RUN	ON	Operational	
	Blinking	Pre-operational (CANopen)	
	Single flash	STOPPED	
ERR	OFF	Device in RESET state	
	ON	BUS OFF	
	Single flash	Warning limit reached	
ST	Double flash	Error Control Event	
	Triple flash	Sync Error (CANopen)	
	OFF	No error. Device working	
PWR	ON	DIAG Error	
	Blinking	INIT and DIAG running	
	Single flash	Baud rate setting	
IN 1..8	OFF	Module OK and ready	
	ON	Module Power Supply ON	
	OFF	Module Power Supply OFF	

I/O LEDs	Status	Meaning
IN 1..8	ON	Input active
	OFF	Input inactive

I/O LEDs	Status	Meaning
OUT 1..8	ON	Output active
	OFF	Output inactive

Bit Rate and Node ID configuration

Bit rate

Lo switch	Baud rate kbps	Bus length m
1	20	2500
2	50	1000
3	100	500
4	125	500
5	250	250
6*	500	100
7	800	50
8	1000	25

Node ID

Hi switch	Lo switch	Valid ID Node
0	1	01h (address 1)
0	2	02h (address 2)
↓	↓	↓
7	F	7Fh (address 127D)*

Notes: * Default value

Procedure for Node ID and Bit Rate configuration

The HI and LO hexadecimal rotary switches set the module's Bit Rate and CAN Node ID. During the configuration, the module must be **off line** and the CAN bus must be physically disconnected.

To configure the module, follow the procedure:

- 1 Turn the Power OFF
- 2 Set the **HI** switch to "F"
- 3 Select the desired Bit Rate value by setting the **LO** switch following the table (e.g. "8" for 1 Mbps)
- 4 Turn the Power ON
- 5 Shift the **HI** switch to "E" (all the module service LEDs should flash)
- 6 Turn the Power OFF. Now configure Node ID
- 7 Set the **HI** and **LO** switches to the desired valid Node ID following the table
- 8 Turn the Power ON.

Alternatively, at step 7 set the value 00h. Then, at the next Power ON, the last valid stored value will be resumed as Node ID.

Default values: Bit Rate = 500 kbps, Node ID = 127D

The information is now ready to be transmitted on the CAN network via the TPDO1. Other entries determine the trigger condition:

Index 6006h – Interrupt Mask Any Change 8-bit:

detection of any input level change

Index 6007h – Interrupt Mask Low-to-High 8-bit:

detection of a Low-to-High edge

Index 6008h – Interrupt Mask High-to-Low 8-bit:

detection of a High-to-Low edge

Index 6005h – Global Interrupt Enable:

the actual PDO transmission is performed if two initial conditions are met: the variable in Index 6005h should be "TRUE" and the PDO transmission type should be 255.

Proprietary input functions

In addition to the expected functions, the module provides a number of proprietary input function options. Input-option combinations are fixed, and determined by the value of the entry in the table below:

Index 2002h – Input options

Value	Option activated	Value	Option activated
0	No option	8	Period measurement on ch. 2
1	Frequency measurement on ch. 1	9	Period measurement on ch. 1, 2
2	Frequency measurement on ch. 2	10	Frequency measurement on ch. 1 and Counter on ch. 2
3	Frequency measurement on ch. 1, 2	11	Frequency measurement on ch. 1 and Period measurement on ch. 2
4	Counter on ch. 1	12	Frequency measurement on ch. 2 and Counter on ch. 1
5	Counter on ch. 2	13	Frequency measurement on ch. 2 and Period measurement on ch. 1
6	Counter on ch. 1, 2	14	Counter on ch. 1 and Period measurement on ch. 2
7	Period measurement on ch. 1	15	Counter on ch. 2 and Period measurement on ch. 1

An explanation of the added functions follows.

• Input Latch:

Available for all inputs. **Index 2011h – Read Input Latch** contains the value of the staticised inputs. The **Index 200Eh – Reset Latch** commands the resetting of a single latched input on a bit basis: writing 1 to the n-th bit resets the n-th input channel. The latching function acts after the filtering and polarity settings.

• Input monostable:

Available for all inputs. The input active value is maintained for a duration of time configurable with the **Index 2010h – Time Value** (8 element ARRAY, time base 5ms). The state of the inputs are kept in **Index 2012h – Read Input Wait**.

• Frequency measurement

This function is able to measure the frequency of a periodic digital signal. The measure is stored in **Index 2006h – Input Frequency Value**. Two ranges of measure can be taken (the ranges for the two interested channels are the same):

- range 0.015Hz – 2kHz (in 1mHz increments): in

Index 2005h – Set Frequency Range, set the value 0

- range 1Hz – 20kHz (in Hz increments): in

Index 2005h, set the value 1.

- In "RUN" state the acquired values are available at:

Index 2006h – Input Frequency Value subindex 01h and/or 02h.

• Pulse Counting

This function performs a counting of the Low-to-High edges of the input signals (after filtering and polarity). The count value is stored in **Index 2007h – Input Count Value**. In

Index 200Dh – Start_Stop you can start, stop or reset the counters:

bit 0 → Start (1)/Stop (0) counter 1

bit 1 → reset state (1)/enabled (0) counter 1

bit 2 → Start (1)/Stop (0) counter 2

bit 3 → reset state (1)/enabled (0) counter 2.

• Period measurement

With this function it is possible to measure the period of a digital periodic input. The **Index 2008h – Input Period Value** contains the value of the measure (from 1ms to 65s, in 1ms increments). In

Index 200Dh – Start_Stop you can start and stop the measure:

bit 4 → Start (1)/Stop (0) period measurement on channel 1

bit 5 → Start (1)/Stop (0) period measurement on channel 2.

Parameter configuration

Index 2000h – Module configuration

Each of the 8 channels of the module can be configured to be either an Input or an Output channel. In the Index 2000h each bit corresponds to a channel. Write 0 for inputs and 1 for outputs. All channels are inputs by default.

Bit	7	6	5	4	3	2	1	0
Channel	Ch 8	Ch 7	Ch 6	Ch 5	Ch 4	Ch 3	Ch 2	Ch 1
Default	0	0	0	0	0	0	0	0

Configuring the Input Channels

The functional block diagram for the Inputs is consistent with the standard profile CiA DS401 [2].

The digital signal is first filtered (**Index 6003h – Filter Constant Input 8-bit** and **Index 2004 – Filter Constant**), then polarised (**Index 6002 – Polarity Input 8-bit**) and finally assigned to the variable that contains its value (**Index 6000h – Read Input 8-bit**).

Configuring the Output Channels

The Output functional block diagram is consistent with the standard profile CiA DS401 [2].

• Index 6200h – Write Output 8-bit

This object writes a group of 8 outputs:

1 = output active,

1 = output not active.

The output signalling from a CAN message is processed first.

Two preprocess items are performed:

• Polarisation Index 6202h – Polarity Output 8-bit

This object defines the polarity of a group of 8 output lines. Output polarity can be inverted individually:

1 = output inverted,

0 = output not inverted.

If the object is not supported, the device behaves according to the default value.

• Masking Index 6208h – Filter Mask Output 8-bit

This object defines an additional output filter mask configurable for a group of 8 outputs.

1 = output is set to the received output value

0 = do not care, the received output value is neglected for the corresponding output channel and the old output value is kept.

If the object is not supported, the device behaves according to the default value.

Proprietary output functions

In addition to the expected functions, the module provides a number of proprietary output function options. Input/options combinations are fixed, and determined by the value of the entry in the table below:

Index 2003h – Output options

Value	Option activated	Value	Option activated
0	No option	3	PWM on ch. 3 and ch. 4
1	PWM on ch. 3	4	Pulse on ch. 3
2	PWM on ch. 4	5	Pulse on ch. 4

• Generation of a single pulse of programmable width

Index 200Bh – Output Pulse Value:

Assigns the value of the duration of the pulse within a range from 5ms... 65s, in 5ms steps. Please note that the Output Pulse Value has to be expressed in ms.

Index 200Dh – Start Stop Mode:

In RUN mode, this entry determines the trigger of the pulse. It should be noted that the pulse function is not subject to polarity and filter mask. The generated pulse consists of a Low-to-High edge and, at the end of programmed width, of an High-to-Low edge:

bit 6 → Start (1) ch. 6

bit 15 → Start (1) ch. 4

Please note that bits 6 and 15 are automatically reset by the device, i.e. they are ready for any subsequent pulse.

• PWM pulse generation

Index 2009h – PWM Frequency

Assigns the frequency value of the PWM pulse, ranging from 0.015Hz to 4kHz, in 1mHz steps. Please note that the value is the same for both channels.

Index 200Ah – Output PWM Value

Assigns pulse duty cycle value from 0.0 to 100.0 per cent, in 0.1% steps.

In this case the **Index 6200h – Write Output 8-bit** (subindex 01h) acts as general enabler. Set to "1" the bit associated to the PWM channel you want to enable.

Error mode (or STOPPED NMT state)

In error mode, the outputs behave according to the following two entries **Index 6206 – Error Mode Output 8-bit**

Defines the behaviour of the outputs in the error or STOPPED states.

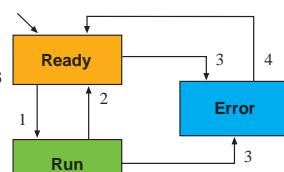
- In the event of a standard digital output, if the corresponding bit is set to 0 the output is maintained at the current value; if set to 1 the value of the corresponding bit of **Index 6207h – Error Value Output 8-bit** is assigned to the output.

- In the event of PWM output the behaviour is similar, but with an additional step. If the corresponding bit of **Index 6206 – Error Mode Output 8-bit** is 0 then the current duty cycle is kept, otherwise the **Index 6207h – Error Value Output 8-bit** is analysed further. If the corresponding bit of Index 6207h is 0 then the duty cycle is forced to 0, otherwise the emergency duty cycle value **Index 2013h – PWM Error Value** is assigned.

Commands

Index 200Ch – Operating mode:

the device has its own internal state machine. It is possible to move through this by sending appropriate values to the Index 200Ch, following the table below.



Transition	Operating mode value	Storage
Init	-	At Power-Up, the Device is in the “ready” state. Transition 1 is also executed if Index 200Ch - Operating Mode contains the default value 1
1	01h	Operating mode “RUN” is activated
2	00h	Return to the initialisation “ready” state. The transition is performed: • following an operator’s command • after assigning the configuration parameter 2003h
3	FFh	The “error” state is automatically assigned by the device (and the operating mode value is read only) when: • an attempt is made to execute an unexpected command
4	00h	This value causes an exit from the “error” state, after the error condition is acknowledged. The only transition is to the “ready” state

Emergency messages

The module automatically sends emergency messages including error codes. The communication errors are described in CiA DS301 [1]. The error codes are expressed as a DEVICE SPECIFIC ERROR type of code. The codes indicating a specific condition are also inserted, following the table below:

Error code	Error																								
0000000000	No error – This code is generated when exiting an error condition, to notify the end of one of the error states																								
0000000007	Error Wrong Command – An attempt to execute a command from an illegal state																								
Emergency Message	<table border="1"> <tr> <td>0</td><td>1</td><td>2</td><td>3</td><td>4</td><td>5</td><td>6</td><td>7</td> </tr> <tr> <td>01h</td><td>FFh</td><td>21h</td><td>00h</td><td>00h</td><td>00h</td><td>00h</td><td>0yh</td> </tr> <tr> <td colspan="8">COB – ID = [entry 1014h] + NodeID</td> </tr> </table> Error code	0	1	2	3	4	5	6	7	01h	FFh	21h	00h	00h	00h	00h	0yh	COB – ID = [entry 1014h] + NodeID							
0	1	2	3	4	5	6	7																		
01h	FFh	21h	00h	00h	00h	00h	0yh																		
COB – ID = [entry 1014h] + NodeID																									

Parameter Store/Restore

This module allows parameters to be saved in a non volatile memory. In order to avoid storing parameters by mistake, storage is only executed when a specific signature is written to the appropriate subindex. The signature is “save”. Similarly, the default values of parameters, according to the communication or device profile, are restored. On receipt of the correct signature in the appropriate subindex, the device restores the default parameters and then confirms the SDO transmission. The signature is “load”. The new configuration becomes active after a reset, i.e. after a “Power OFF/Power ON cycle” or an NMT “Reset Node” message.

Byte	0	1	2	3	4	5	6	7
Store	22h	10h	10h	01h	73h	61h	76h	65h
Parameter					s	a	v	e
					COB – ID = 600h + NodeID			
Restore	22h	11h	10h	01h	6Ch	6Fh	61h	64h
Parameter					I	o	a	d
					COB – ID = 600h + NodeID			

SDO Messages

The entries of a device Object Dictionary are accessed through SDO (Service Data Object) messages. The basic SDO messages are as follows, as based on the Client – Server request and response model:

Byte	0	1	2	3	4	5	6	7
Read request	40h		Index	Sub-Index				Reserved
					COB – ID = 600h + NodeID			
Read response	4xh *		Index	Sub-Index				Data
					COB – ID = 580h + NodeID			
Write request	22h		Index	Sub-Index				Data
					COB – ID = 600h + NodeID			
Write response	60h		Index	Sub-Index				Reserved
					COB – ID = 580h + NodeID			

* This code is type dependant. Please refer to the CiA DS301 Profile for more details.

Reference documents

List of CiA documents to which the user should refer:

- [1] CiA DS301 - CANopen Application Layer and Communication Profile;
- [2] CiA DS401 - CANopen Device Profile for generic I/O Modules.

Accessories, Spare Parts and Warranty

Power Supply 75W 24Vdc 3A	AP-S2/AL-DR75-24
Power Supply 120W 24Vdc 5A	AP-S2/AL-DR120-24
Additional Terminal Block 2x11	AP-S2/TB-211-1
Female Plug 11 Screw clamp	AP-S2/SPINA-V11
Female Plug 11 Spring clamp	AP-S2/SPINA-M11
RJ45 terminated cable 14cm	AP-S2/LOCAL-BUS76
RJ45 terminated cable 22cm	AP-S2/LOCAL-BUS152
CAN termination Adapter	AP-S2/TERM-CAN

Warranty: 3 years excluding defects due to improper use

Object Dictionary (with default values)

⚠ In order to configure the module, it is necessary to connect it to a PC with the CAN interface and the supervisory software installed. The configuration can be obtained by writing the desired values to the module's variables listed in the Object Dictionary.

Object Dictionary structure

Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO
1000		VAR	Device Type	00030191	UNSIGNED32	RO	M
1001		VAR	Error Register	00	UNSIGNED8	RO	M
1003		ARRAY	Predefined error field	00000000	RO	O	
1005		VAR	COB-ID SYNC	00000080	UNSIGNED32	RW	O
1006		VAR	Communication cycle period	00000000	UNSIGNED32	RW	O
1007		VAR	Synchronous window length	00000000	UNSIGNED32	RW	O
1008		VAR	Manufacturer Device Name	"08TS"	Vis-String	const	O
1009		VAR	Manufacturer Hardware Version	"1.00"	Vis-String	const	O
100A		VAR	Manufacturer Software Version	"1.00"	Vis-String	const	O
100C		VAR	Guard Time	0000	UNSIGNED16	RW	O
100D		VAR	Life Time Factor	00	UNSIGNED8	RW	O
1010		ARRAY	Store Parameters				
00h	VAR	Largest subindex supported	01	UNSIGNED8	RO		
01h	VAR	Save all parameters	03	UNSIGNED32	RW		
1011		ARRAY	Restore Default Parameters			RW	O

Index (hex)	Sub Index	Object	Name	Default [hex]	Type	Acc. Attr.	MO
1A02		RECORD	3rd Transmit PDO Mapping		PDO Mapping (21h)		M
00h	VAR	No. of mapped application obj	02	UNSIGNED8	RO		
01h	VAR	Value Input Count1	20070120	UNSIGNED32	RO		
02h	VAR	Value Input Count2	20070220	UNSIGNED32	RO		
1A03		RECORD	4th Transmit PDO Mapping		PDO Mapping (21h)		M
00h	VAR	No. of mapped application obj	02	UNSIGNED8	RO		
01h	VAR	Value Input Period1	20080120	UNSIGNED32	RO		
02h	VAR	Value Input Period2	20080220	UNSIGNED32	RO		
2000		VAR	Module Configuration	00	UNSIGNED8	RW	O
2002		VAR	Input Option	00	UNSIGNED8	RW	O
2003		VAR	Output Option	00	UNSIGNED8	RW	O
2004		ARRAY	Filter Constant				O
00h	VAR	NrOfObjects	08	UNSIGNED8	RO		
01h	VAR	Filter Constant 1	00	UNSIGNED8	RW		
...	...	Filter Constant 2 ... 7	00

00h	VAR	Largest subindex supported	01	UNSIGNED8	RO		
01h	VAR	Restore all default param.	01	UNSIGNED32	RW		
1014	VAR	COB-ID EMCY	80 + NodeID	UNSIGNED32	RW	O	
1015	VAR	Inhibit Time EMCY	0000	UNSIGNED16	RW	O	
1017	VAR	Producer heartbeat time	0000	UNSIGNED16	RW	O	
1018	RECORD	Identity Object		Identity (23h)	O		
00h	VAR	Number of entries	01	UNSIGNED8	RO		
01h	VAR	Vendor ID	000000E9	UNSIGNED32	RO		
1200	RECORD	Server SDO Parameters		SDO Param (22h)	O		
00h	VAR	Number of entries	02	UNSIGNED8	RO		
01h	VAR	COB-ID Client -> Server	600 + NodeID	UNSIGNED32	RO		
02h	VAR	COB-ID Server -> Client	580 + NodeID	UNSIGNED32	RO		
1400	RECORD	1st Receive PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	02	UNSIGNED8	RO		
01h	VAR	COB-ID used	200 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
1401	RECORD	2nd Receive PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	02	UNSIGNED8	RO		
01h	VAR	COB-ID used	300 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
1402	RECORD	3rd Receive PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	02	UNSIGNED8	RO		
01h	VAR	COB-ID used	400 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
1403	RECORD	4th Receive PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	02	UNSIGNED8	RO		
01h	VAR	COB-ID used	500 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		

1600	RECORD	1st Receive PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	01	UNSIGNED8	RO		
01h	VAR	DigOutput8_1	62000108	UNSIGNED32	RO		
1601	RECORD	2nd Receive PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	02	UNSIGNED8	RO		
01h	VAR	Value Output PWM1	200A0110	UNSIGNED32	RO		
02h	VAR	Value Output PWM2	200A0210	UNSIGNED32	RO		
1602	RECORD	3rd Receive PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	02	UNSIGNED8	RO		
01h	VAR	Value Output Pulse1	200b0110	UNSIGNED32	RO		
02h	VAR	Value Output Pulse2	200b0210	UNSIGNED32	RO		
1603	RECORD	4th Receive PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	01	UNSIGNED8	RO		
01h	VAR	Start Stop	200D0008	UNSIGNED32	RO		
1800	RECORD	1st Transmit PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	05	UNSIGNED8	RO		
01h	VAR	COB-ID used	180 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
03h	VAR	Inhibit time	0000	UNSIGNED16	RW		
04h	VAR	Reserved		UNSIGNED8	RW		
05h	VAR	Event timer	0000	UNSIGNED16	RW		
1801	RECORD	2nd Transmit PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	05	UNSIGNED8	RO		
01h	VAR	COB-ID used	280 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
03h	VAR	Inhibit time	0000	UNSIGNED16	RW		
04h	VAR	Reserved		UNSIGNED8	RW		
05h	VAR	Event timer	0000	UNSIGNED16	RW		

1802	RECORD	3rd Transmit PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	05	UNSIGNED8	RO		
01h	VAR	COB-ID used	380 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
03h	VAR	Inhibit time	0000	UNSIGNED16	RW		
04h	VAR	Reserved		UNSIGNED8	RW		
05h	VAR	Event timer	0000	UNSIGNED16	RW		
1803	RECORD	4th Transmit PDO Comm Param.		PDO CommPar (20h)	M		
00h	VAR	Largest subindex supported	05	UNSIGNED8	RO		
01h	VAR	COB-ID used	480 + NodeID	UNSIGNED32	RW		
02h	VAR	Transmission type	FF *	UNSIGNED8	RW		
03h	VAR	Inhibit time	0000	UNSIGNED16	RW		
04h	VAR	Reserved		UNSIGNED8	RW		
05h	VAR	Event timer	0000	UNSIGNED16	RW		
1A00	RECORD	1st Transmit PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	03	UNSIGNED8	RO		
01h	VAR	DigInput8_1	60000108	UNSIGNED32	RO		
02h	VAR	Read Input Latch1	20110108	UNSIGNED32	RO		
03h	VAR	Read Wait Input1	20120108	UNSIGNED32	RO		
1A01	RECORD	2nd Transmit PDO Mapping		PDO Mapping (21h)	M		
00h	VAR	No. of mapped application obj	02	UNSIGNED8	RO		
01h	VAR	Value Input Frequency1	20060120	UNSIGNED32	RO		
02h	VAR	Value Input Frequency2	20060220	UNSIGNED32	RO		

2010	ARRAY	Wait Time Value					O
00h	VAR	NrOfObjects	08	UNSIGNED8	RO		
01h	VAR	Wait Time 1 Value	0000	UNSIGNED16	RW		
...	...	Wait Time 2 ... 7 Value	0000	
2011	ARRAY	Read Input Latch					
00h	VAR	NrOfObjects	01	UNSIGNED8	RO		
01h	VAR	Read Input Latch1	00	UNSIGNED8	RO		
2012	ARRAY	Read Input Wait					
00h	VAR	NrOfObjects	01	UNSIGNED8	RO		
01h	VAR	Read Input1 Wait	00	UNSIGNED8	RO		
2013	ARRAY	PWM Error Value					
00h	VAR	NrOfObjects	02	UNSIGNED8	RO		
01h	VAR	PWM Error Value1	0000	UNSIGNED16	RW		
02h	VAR	PWM Error Value2	0000	UNSIGNED16	RW		
3000	VAR	Node Address	7F	UNSIGNED8	RO		O
3001	VAR	Node Baudrate	06	UNSIGNED8	RO		O
6000	ARRAY	Read Input 8 - bit					M
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	DigInput8_1	00	UNSIGNED8	RO		
6002	ARRAY	Polarity Input 8 - bit					
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	Polarity8_1	00	UNSIGNED8	RO		
6003	ARRAY	Filter Constant Input 8 - bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	FilterConst8_1	00	UNSIGNED8	RW		
6005	VAR	Global Interrupt Enable Digital	TRUE	BOOLEAN	RW		O
6006	ARRAY	Interrupt Mask Any Change 8 - bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	InterruptAnyChange8_1	FF	UNSIGNED8	RW		

6007	ARRAY	Interrupt Mask Low to High 8 - bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	InterruptLowToHigh8_1	00	UNSIGNED8	RO		
6008	ARRAY	Interrupt Mask High to Low 8 - bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	InterruptHighToLow8_1	00	UNSIGNED8	RO		
6200	ARRAY	Write Output 8 - bit					M
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	DigOutput8_1	00	UNSIGNED8	RO		
6202	ARRAY	Polarity Output 8 - Bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	Polarity8_1	00	UNSIGNED8	RO		
6206	ARRAY	Error Mode Output 8 - Bit					O
00h	VAR	No. of Elements	01	UNSIGNED8	RO		
01h	VAR	ErrorMode8_1	FF	UNSIGNED8	RO</td		